




BRAKES

## BRAKE ASSY

### TOYOTA 310x60 Hub 105mm

Auto adjuster and parking brake


| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF244    |      | Brake assembly RH        |     |
| MF245    |      | Brake assembly LH        |     |
| PTC112   | 1    | Plate RH                 |     |
| PTC113   | 2    | Plate LH                 |     |
| CF135    | 3    | Wheel cylinder           |     |
| CF135/A  | 3    | Wheel cylinder           |     |
| CF135M   | 3    | Wheel cylinder           |     |
| CF135/AM | 3    | Wheel cylinder           |     |
| GNF19    | 4    | Brake shoe               |     |
| RGF122   | 5    | Brake manual adjuster RH |     |
| RGF122/A | 5    | Brake manual adjuster LH |     |
| ML387    | 6    | Lever                    |     |
| ML390    | 7    | Lever spring             |     |
| ML381    | 8    | Lever                    |     |
| ML388    | 9    | Spring                   |     |
| ML389    | 10   | Lever RH                 |     |
| ML389/A  | 10   | Lever LH                 |     |
| ML401    | 11   | Lever RH                 |     |
| ML401/A  | 11   | Lever LH                 |     |

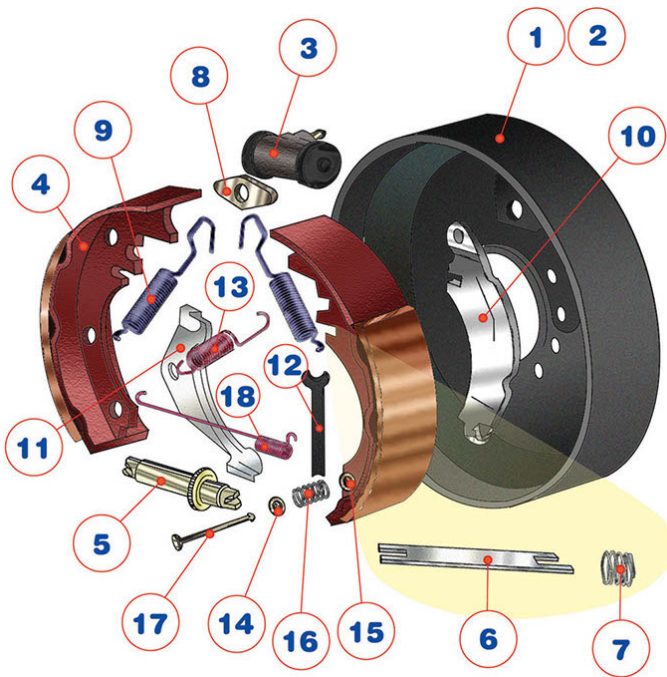

### TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF246    |      | Brake assembly RH        |     |
| MF247    |      | Brake assembly LH        |     |
| PTC60    | 1    | Plate RH                 |     |
| PTC61    | 2    | Plate LH                 |     |
| CF135M   | 3    | Wheel cylinder           |     |
| CF135/AM | 3    | Wheel cylinder           |     |
| CF135    | 3    | Wheel cylinder           |     |
| CF135/A  | 3    | Wheel cylinder           |     |
| GNF19    | 4    | Brake shoe               |     |
| RGF122   | 5    | Brake manual adjuster RH |     |
| RGF122/A | 5    | Brake manual adjuster LH |     |
| ML387    | 6    | Lever                    |     |
| ML390    | 7    | Lever spring             |     |
| ML381    | 8    | Lever                    |     |
| ML388    | 9    | Spring                   |     |
| ML389    | 10   | Lever RH                 |     |
| ML389/A  | 10   | Lever LH                 |     |
| ML392    | 11   | Lever RH                 |     |
| ML392/A  | 11   | Lever LH                 |     |

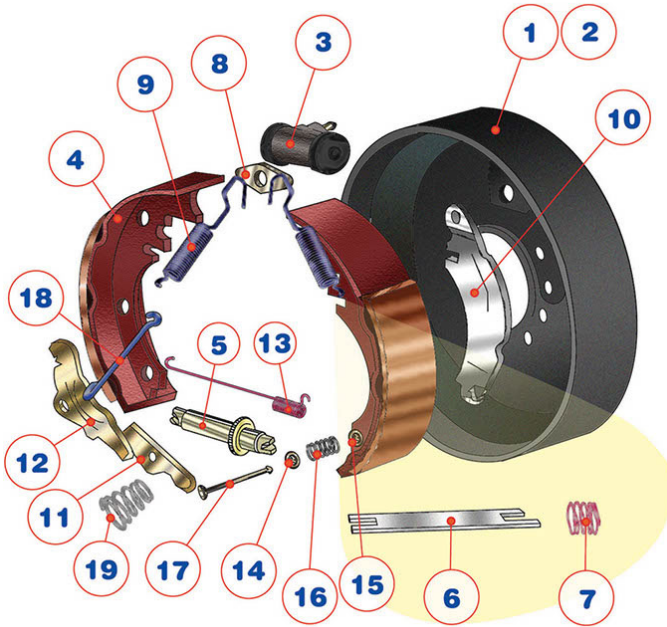




BRAKES

## BRAKE ASSY

### TOYOTA 255x50 Hub 76mm

Auto adjuster and parking brake


| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF248    |      | Brake assembly RH        |     |
| MF249    |      | Brake assembly LH        |     |
| PTC58    | 1    | Plate RH                 |     |
| PTC59    | 2    | Plate LH                 |     |
| RGF119   | 3    | Brake manual adjuster RH |     |
| RGF119/A | 3    | Brake manual adjuster LH |     |
| CF133    | 4    | Wheel cylinder           |     |
| GNF18    | 5    | Brake shoe               |     |
| ML108    | 6    | Brake spring             |     |
| ML194    | 7    | Spring link              |     |
| ML116    | 8    | Spring pin               |     |
| ML110    | 9    | Brake spring             |     |
| ML151    | 10   | Brake spring             |     |
| ML101    | 11   | Brake spring washer      |     |
| ML107    | 12   | Adjuster lever Right     |     |
| ML111    | 12   | Adjuster lever Left      |     |
| ML224    | 13   | Lever spring RH          |     |
| ML225    | 13   | Spring LH                |     |
| ML165    | 14   | Drive cable              |     |

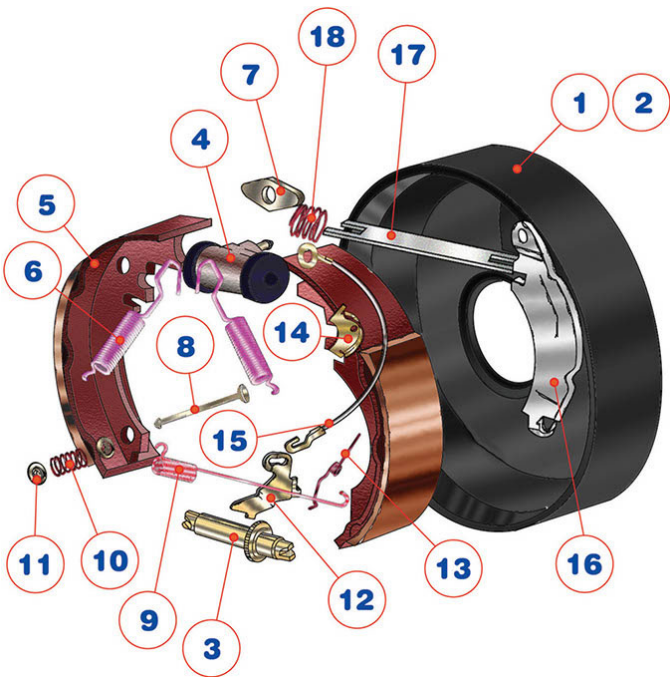

### TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF250    |      | Brake assembly RH        |     |
| MF251    |      | Brake assembly LH        |     |
| PTC71    | 1    | Plate RH                 |     |
| PTC72    | 2    | Plate LH                 |     |
| RGF119   | 3    | Brake manual adjuster RH |     |
| RGF119/A | 3    | Brake manual adjuster LH |     |
| CF134    | 4    | Wheel cylinder           |     |
| CF134/A  | 4    | Wheel cylinder           |     |
| GNF18    | 5    | Brake shoe               |     |
| ML108    | 6    | Brake spring             |     |
| ML194    | 7    | Spring link              |     |
| ML196    | 8    | Spring pin               |     |
| ML110    | 9    | Brake spring             |     |
| ML151    | 10   | Brake spring             |     |
| ML101    | 11   | Brake spring washer      |     |
| ML111    | 12   | Adjuster lever Left      |     |
| ML107    | 12   | Adjuster lever Right     |     |
| ML224    | 13   | Lever spring RH          |     |
| ML225    | 13   | Spring LH                |     |

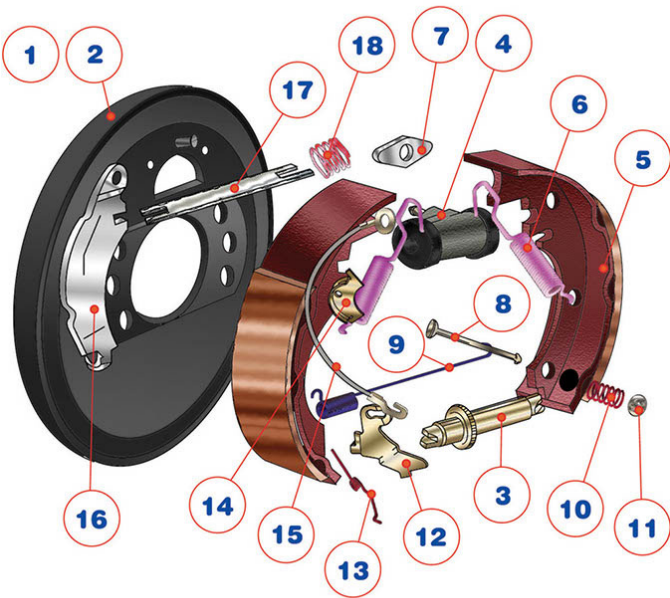



BRAKES

## BRAKE ASSY

TOYOTA

Auto adjuster and parking brake


| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF252    |      | Brake assembly RH        |     |
| MF255    |      | Brake assembly LH        |     |
| PTC1     | 1    | Plate RH                 |     |
| PTC27    | 2    | Plate LH                 |     |
| ML116    | 3    | Spring pin               |     |
| ML101    | 4    | Brake spring washer      |     |
| ML151    | 5    | Brake spring             |     |
| ML253    | 6    | Spring                   |     |
| ML377    | 7    | Spring                   |     |
| RGF138   | 8    | Brake manual adjuster RH |     |
| RGF138/A | 8    | Brake manual adjuster LH |     |
| ML165    | 9    | Drive cable              |     |
| ML104    | 10   | Adjuster lever Left      |     |
| ML105    | 10   | Adjuster lever Right     |     |
| ML168    | 11   | Adjuster cable           |     |
| CF157    | 12   | Wheel cylinder           |     |
| GNF94    | 13   | Brake shoe               |     |
| ML224    | 14   | Lever spring RH          |     |
| ML225    | 14   | Spring LH                |     |



TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF256    |      | Brake assembly RH        |     |
| MF257    |      | Brake assembly LH        |     |
| PTC123   | 1    | Plate RH                 |     |
| PTC124   | 2    | Plate LH                 |     |
| CF130    | 3    | Wheel cylinder           |     |
| RGF131   | 4    | Brake manual adjuster RH |     |
| RGF131/A | 4    | Brake manual adjuster LH |     |
| GNF11    | 5    | Brake shoe Right         |     |
| ML279    | 6    | Brake shoe lever RH      |     |
| ML279/A  | 6    | Brake shoe lever LH      |     |
| ML280    | 7    | Spring                   |     |
| ML282    | 8    | Spring                   |     |
| ML281    | 9    | Link                     |     |
| ML283    | 10   | Lever                    |     |
| ML285    | 11   | Spring                   |     |
| ML278    | 12   | Link                     |     |
| ML284    | 13   | Adjuster lever RH        |     |
| ML284/A  | 13   | Adjuster lever LH        |     |
| ML286    | 14   | Adjuster lever RH        |     |

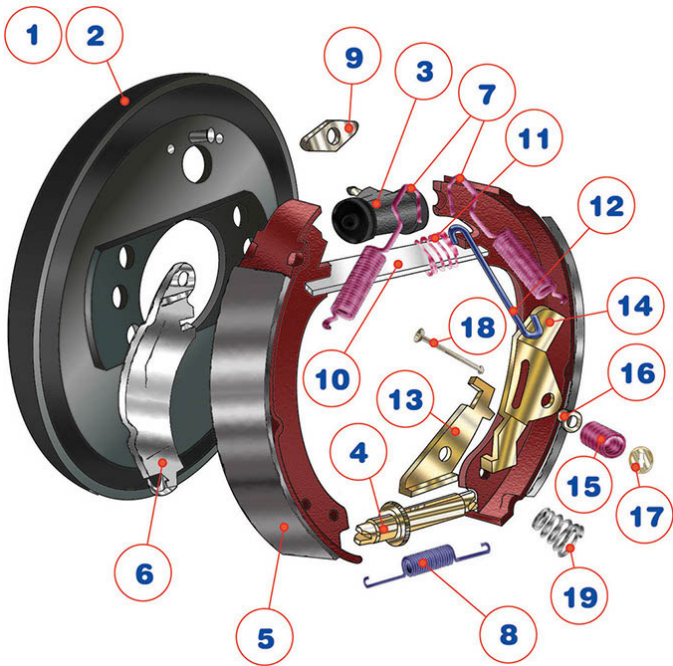






BRAKES

BRAKE ASSY

TOYOTA

Auto adjuster and parking brake


| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF258    |      | Brake assembly RH        |     |
| MF259    |      | Brake assembly LH        |     |
| CF132.2  | 3    | Wheel cylinder           |     |
| RGF106   | 4    | Brake manual adjuster RH |     |
| RGF106/A | 4    | Brake manual adjuster LH |     |
| GNF22    | 5    | Brake shoe Right         |     |
| GNF22/A  | 5    | Brake shoe left          |     |
| ML113    | 6    | Brake spring             |     |
| ML194    | 7    | Spring link              |     |
| ML141    | 8    | Brake spring             |     |
| ML169    | 9    | Adjuster cable           |     |
| ML166    | 10   | Drive cable              |     |
| ML204    | 11   | Lever                    |     |
| ML197    | 12   | Spring RH                |     |
| ML198    | 12   | Spring LH                |     |
| ML112    | 13   | Brake spring             |     |
| ML106    | 14   | Brake spring washer      |     |
| ML140    | 15   | Spring pin               |     |
| ML199    | 16   | Lever RH                 |     |

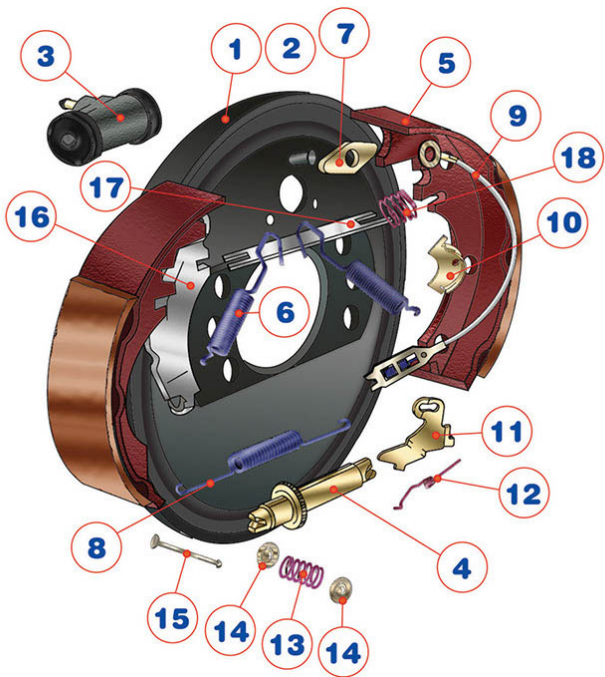


TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF262    |      | Brake assembly RH        |     |
| MF263    |      | Brake assembly LH        |     |
| CF132    | 3    | Wheel cylinder           |     |
| RGF137   | 4    | Brake manual adjuster RH |     |
| RGF137/A | 4    | Brake manual adjuster LH |     |
| GNFK34   | 5    | Brake shoes kit          |     |
| ML269    | 6    | Brake shoe lever RH      |     |
| ML269/A  | 6    | Lever LH                 |     |
| ML270    | 7    | Lever RH                 |     |
| ML270/A  | 7    | Lever LH                 |     |
| ML201    | 8    | Lever spring             |     |
| ML297    | 9    | Drive cable              |     |
| ML231    | 10   | Adjuster cable           |     |
| ML361    | 11   | Lever RH                 |     |
| ML361/A  | 11   | Lever LH                 |     |
| ML268    | 12   | Spring RH                |     |
| ML268/A  | 12   | Lever spring LH          |     |
| ML194    | 13   | Spring link              |     |
| ML266    | 14   | Brake spring             |     |

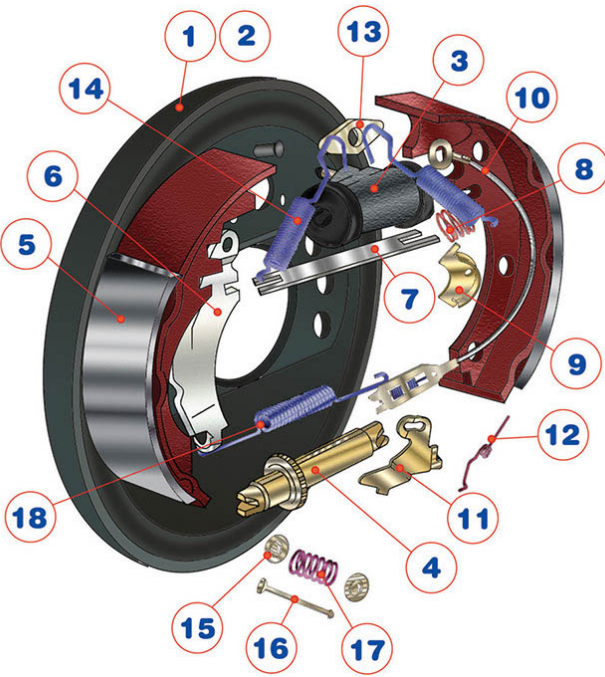

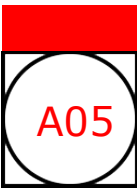


BRAKES

BRAKE ASSY

TOYOTA

Auto adjuster and parking brake


| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF320    |      | Brake assembly           |     |
| MF321    |      | Brake assembly           |     |
| CF131    | 3    | Wheel cylinder           |     |
| CF131/A  | 3    | Wheel cylinder           |     |
| RGF123   | 4    | Brake manual adjuster RH |     |
| RGF123/A | 4    | Brake manual adjuster LH |     |
| GNF79    | 5    | Brake shoe Right         |     |
| GNF79/A  | 5    | Brake shoe left          |     |
| ML331    | 6    | Drive cable              |     |
| ML332    | 7    | Adjuster cable           |     |
| ML251    | 8    | Spring                   |     |
| ML252    | 8    | Spring                   |     |
| ML248    | 9    | Link LH                  |     |
| ML182    | 9    | Link                     |     |
| ML246    | 10   | Bolt                     |     |
| ML320    | 11   | Adjuster cable           |     |
| ML329    | 12   | Spring                   |     |
| ML323    | 13   | Lever RH                 |     |
| ML324    | 13   | Lever LH                 |     |

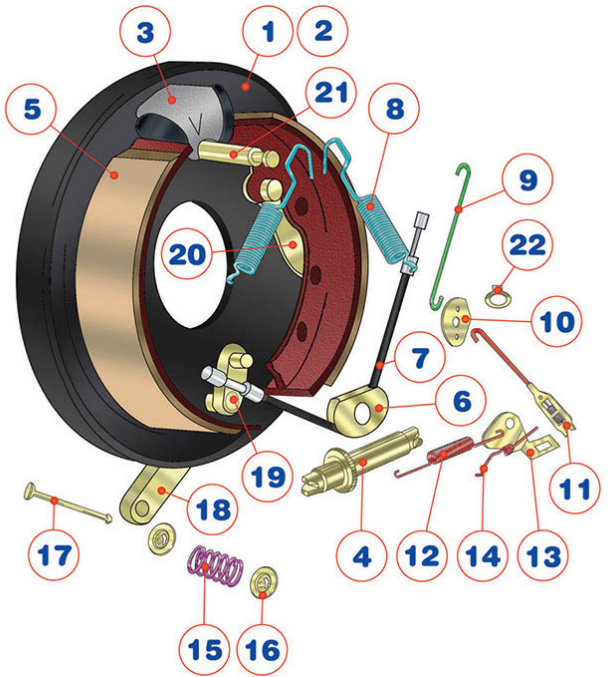

TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF382    |      | Brake assembly RH        |     |
| MF383    |      | Brake assembly LH        |     |
| PTC110   | 1    | Plate RH                 |     |
| PTC111   | 2    | Plate LH                 |     |
| CF131M   | 3    | Wheel cylinder           |     |
| CF131/AM | 3    | Wheel cylinder           |     |
| RGF123   | 4    | Brake manual adjuster RH |     |
| RGF123/A | 4    | Brake manual adjuster LH |     |
| GNF97    | 5    | Brake shoe Right         |     |
| GNF97/A  | 5    | Brake shoe Left          |     |
| ML331    | 6    | Drive cable              |     |
| ML332    | 7    | Adjuster cable           |     |
| ML240    | 8    | Spring RH                |     |
| ML241    | 8    | Spring LH                |     |
| ML248    | 9    | Link LH                  |     |
| ML182    | 9    | Link                     |     |
| ML246    | 10   | Bolt                     |     |
| ML320    | 11   | Adjuster cable           |     |
| ML329    | 12   | Spring                   |     |

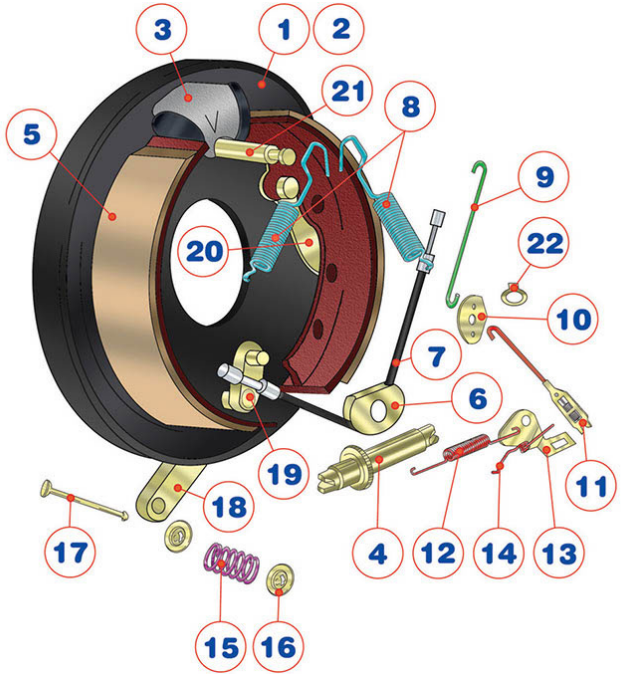




BRAKES

# BRAKE ASSY

TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF384    |      | Brake assembly RH        |     |
| MF385    |      | Brake assembly LH        |     |
| CF131    | 3    | Wheel cylinder           |     |
| CF131/A  | 3    | Wheel cylinder           |     |
| GNFK18   | 4    | brake shoes kit          |     |
| RGF123   | 5    | Brake manual adjuster RH |     |
| RGF123/A | 5    | Brake manual adjuster LH |     |
| ML107    | 6    | Adjuster lever Right     |     |
| ML111    | 6    | Adjuster lever Left      |     |
| ML242    | 7    | Spring                   |     |
| ML189    | 8    | Brake spring             |     |
| ML243    | 8    | Spring                   |     |
| ML213    | 8    | Brake spring             |     |
| ML244    | 9    | Cup                      |     |
| ML101    | 9    | Brake spring washer      |     |
| ML106    | 9    | Brake spring washer      |     |
| ML116    | 10   | Spring pin               |     |
| ML245    | 10   | Spring pin               |     |
| ML246    | 11   | Bolt                     |     |

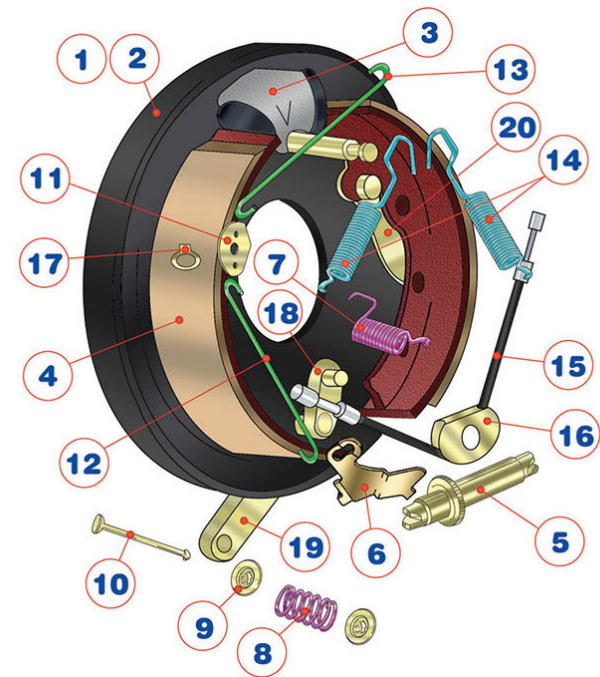

TOYOTA

Auto adjuster and parking brake

| Cod.     | Pos. | Description              | Qty |
|----------|------|--------------------------|-----|
| MF394    |      | Brake assembly RH        |     |
| MF395    |      | Brake assembly LH        |     |
| CF235M   | 3    | Wheel cylinder           |     |
| RGF137   | 4    | Brake manual adjuster RH |     |
| RGF137/A | 4    | Brake manual adjuster LH |     |
| GNFK34   | 5    | Brake shoes kit          |     |
| ML269    | 6    | Brake shoe lever RH      |     |
| ML269/A  | 6    | Lever LH                 |     |
| ML270    | 7    | Lever RH                 |     |
| ML270/A  | 7    | Lever LH                 |     |
| ML201    | 8    | Lever spring             |     |
| ML297    | 9    | Drive cable              |     |
| ML231    | 10   | Adjuster cable           |     |
| ML361    | 11   | Lever RH                 |     |
| ML361/A  | 11   | Lever LH                 |     |
| ML268    | 12   | Spring RH                |     |
| ML268/A  | 12   | Lever spring LH          |     |
| ML194    | 13   | Spring link              |     |
| ML266    | 14   | Brake spring             |     |

