


BRAKES

BRAKE ASSY

CATERPILLAR 245x60


Without parking brake

Cod.	Pos.	Description	Qty
MF219		Brake assembly	
PTC70	1	Plate	
CF190	2	Wheel cylinder	
GNF36	3	Brake shoe	
RGF102	4	Brake auto adjuster	
ML238	5	Spring	
ML239	6	Brake spring	
ML152	7	Brake spring	
ML275	8	Spring link	
ML276	9	Spring link	

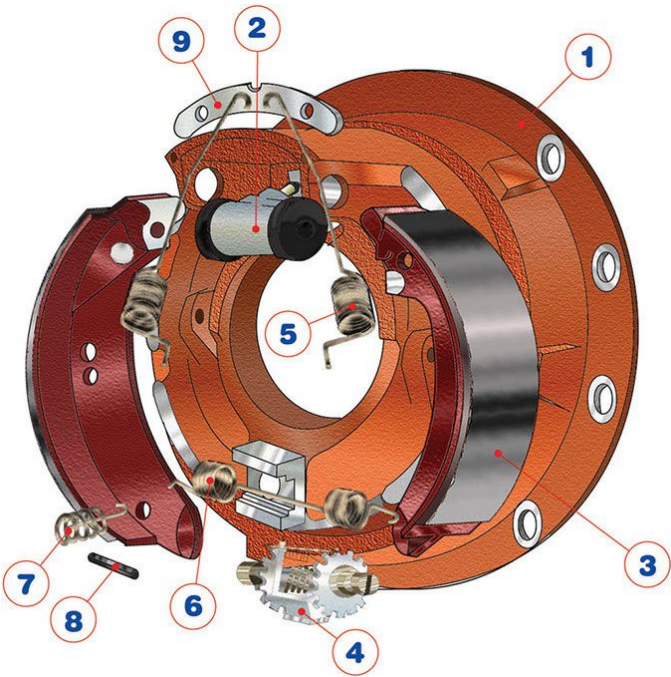

CATERPILLAR

Cod.	Pos.	Description	Qty
MF396		Brake assembly RH	
MF397		Brake assembly LH	
PTC117	1	Plate RH	
PTC118	2	Plate LH	
CF152.1	3	Wheel cylinder	
RGF132	4	Manual brake adjuster RH	
RGF132/A	4	Manual brake adjuster LH	
ML463	5	Adjuster lever RH	
ML464	5	Adjuster lever LH	
ML466	6	Tie-rod RH	
ML467	7	Tie-rod LH	
GNF55	8	Brake shoe RH	
GNF55/A	9	Brake shoe LH	
ML461	10	Spring	
ML468	11	Tie-rod pin	
ML462	12	Spring	
ML465	13	Tie-rod guide	
ML469	14	Tie-rod lock	

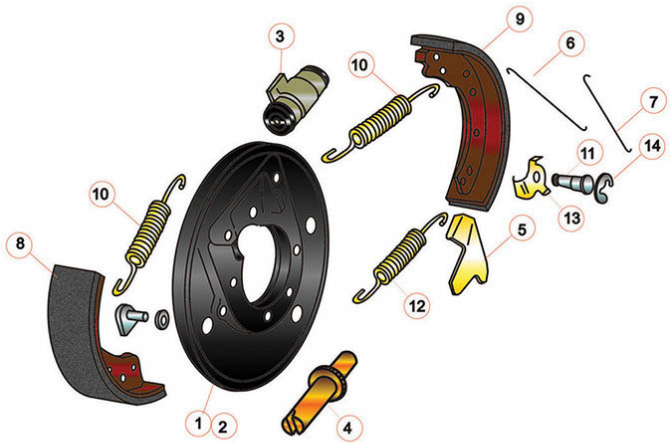



BRAKES

BRAKE ASSY

CATERPILLAR 230x50

With parking brake


Cod.	Pos.	Description	Qty
MF391		Brake assembly RH	
MF392		Brake assembly LH	
CF115	3	Wheel cylinder	
GNF58	5	Brake shoe right lever	
GNF58/A	5	Brake shoe Left lever	
GNF57	6	Brake shoe neutral	
ML122	7	Brake spring	
ML219	8	Spring	
ML161	9	Brake spring	



CATERPILLAR 260x60

Auto adjuster

Cod.	Pos.	Description	Qty
MF296		Brake assembly RH	
MF297		Brake assembly LH	
PTC91	1	Plate	
CF117	2	Wheel cylinder	
RGF127	3	Brake manual adjuster RH	
RGF127/A	3	Brake manual adjuster LH	
GNFK5	4	Brake shoes kit	
ML102	5	Brake spring	
ML100	6	Brake spring Left	
ML114	7	Link	
ML115	8	Link	
ML103	9	Brake spring Right	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML109	12	Spring pin	
ML174	13	Bolt	
ML188	14	Cup	
ML181	15	Lever	
ML300	16	Bolt	

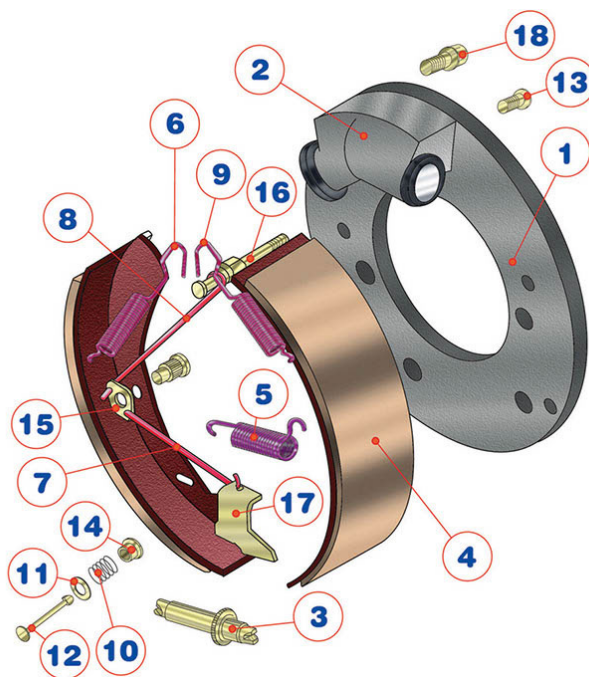




BRAKES

BRAKE ASSY

CATERPILLAR 260x60

Without parking brake


Cod.	Pos.	Description	Qty
MF342		Brake assembly RH	
MF343		Brake assembly LH	
PTC91	1	Plate	
CF064	2	Wheel cylinder	
RGF127	3	Brake manual adjuster RH	
RGF127/A	3	Brake manual adjuster LH	
GNFK5	4	Brake shoes kit	
ML102	5	Brake spring	
ML100	6	Brake spring Left	
ML114	7	Link	
ML115	8	Link	
ML103	9	Brake spring Right	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML109	12	Spring pin	
ML174	13	Bolt	
ML188	14	Cup	
ML181	15	Lever	
ML300	16	Bolt	

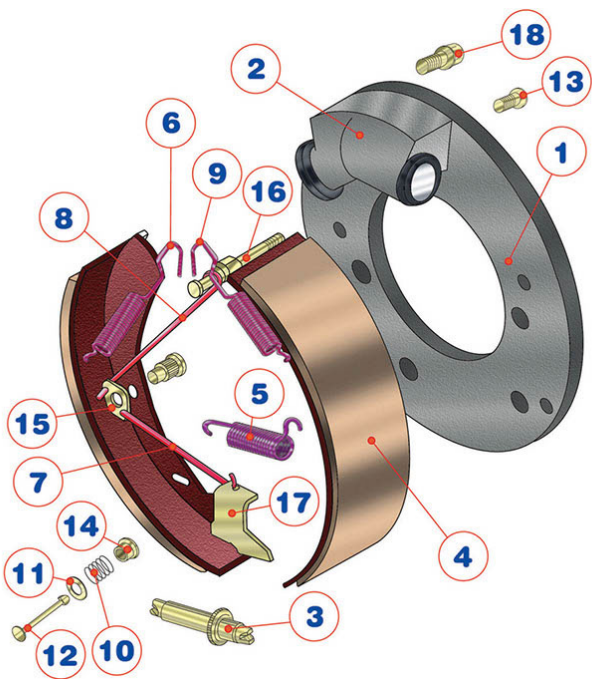

CATERPILLAR 260x60

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF346		Brake assembly RH	
MF347		Brake assembly LH	
PTC121	1	Plate RH	
PTC122	2	Plate LH	
CF117	3	Wheel cylinder	
RGF127	4	Brake manual adjuster RH	
RGF127/A	4	Brake manual adjuster LH	
GNFK6	5	Brake shoes kit with cable	
ML177	6	Adjuster cable	
ML317	7	Lever	
ML179	8	Drive cable	
ML318	9	Lever	
ML176	10	Lever	
ML103	11	Brake spring Right	
ML100	12	Brake spring Left	
ML102	13	Brake spring	
ML180	15	Link kit RH	
ML180/A	15	Adjuster link kit LH	
ML151	16	Brake spring	

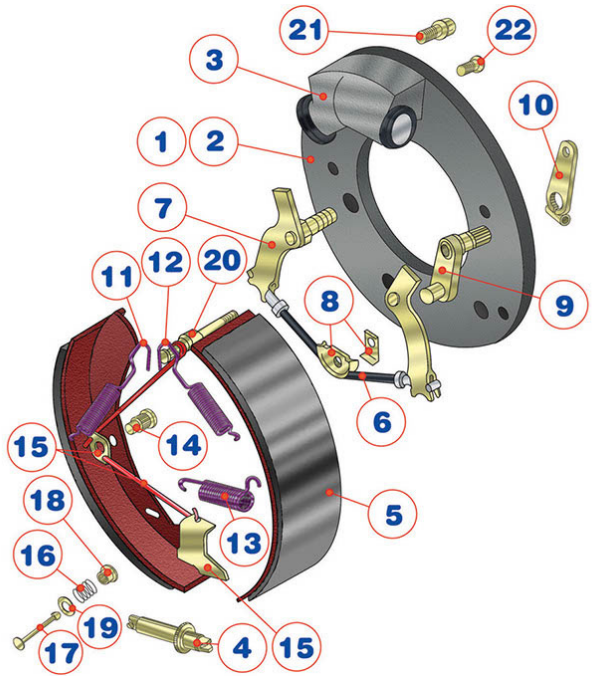




BRAKES

BRAKE ASSY

CATERPILLAR 315x60

Without parking brake


Cod.	Pos.	Description	Qty
MF298		Brake assembly RH	
MF299		Brake assembly LH	
PTC120	1	Plate	
CF117	2	Wheel cylinder	
RGF127	3	Brake manual adjuster RH	
RGF127/A	3	Brake manual adjuster LH	
GNFK3	4	Brake shoes kit	
ML184	5	Spring	
ML183	6	Spring	
ML185	7	Link	
ML182	8	Link	
ML187	9	Spring	
ML189	10	Brake spring	
ML101	11	Brake spring washer	
ML109	12	Spring pin	
ML174	13	Bolt	
ML188	14	Cup	
ML181	15	Lever	
ML300	16	Bolt	

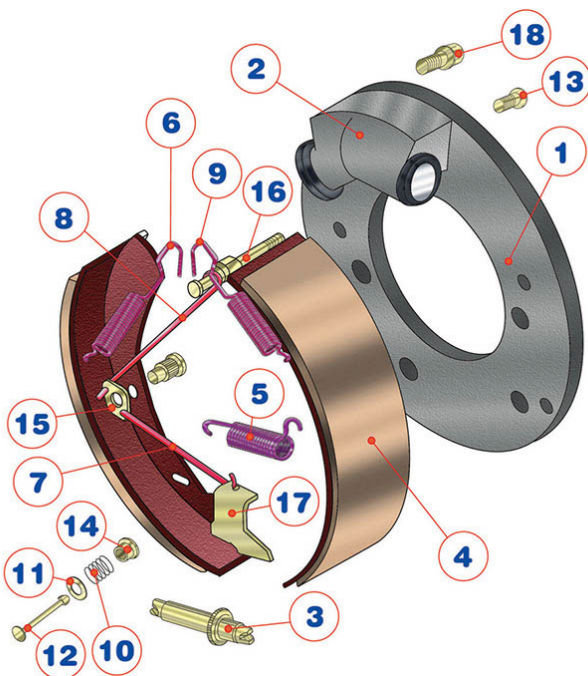


CATERPILLAR 315x80

With parking brake

Cod.	Pos.	Description	Qty
MF233		Brake assembly RH	
MF234		Brake assembly LH	
CF141.1	3	Wheel cylinder	
RGF118	4	Brake auto adjuster	
GNF95	5	Brake shoe Neutral	
GNF96	6	Brake shoe Right lever	
GNF96/A	7	Brake shoe Left lever	
ML137	8	Brake spring	
ML343	9	Spring	
ML158	10	Brake spring	

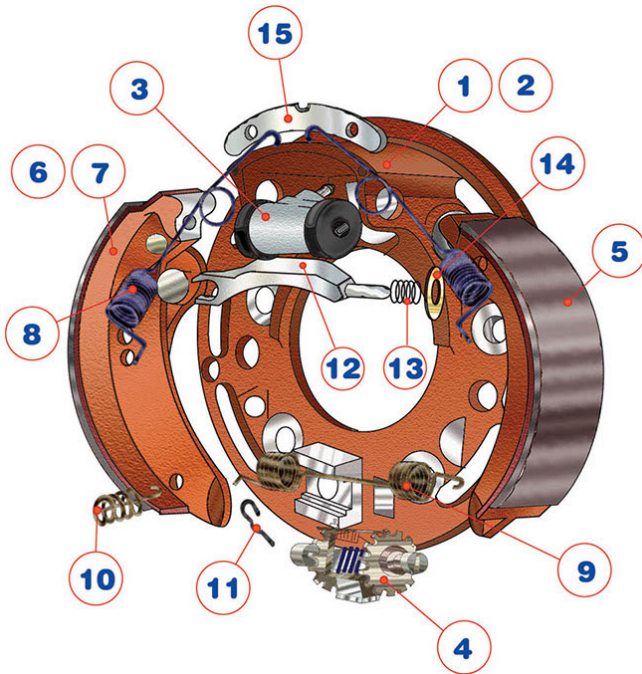

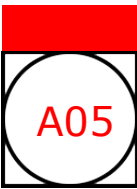


BRAKES

BRAKE ASSY

CATERPILLAR

Without parking brake

Cod.	Pos.	Description	Qty
MF300		Brake assembly RH	
MF303		Brake assembly LH	
PTC89	1	Plate RH	
PTC90	2	Plate LH	
CF118.1	3	Wheel cylinder	
CF118.1/A	3	Wheel cylinder	
GNF34	4	Brake shoe	
ML336	5	Link	
ML337	6	Brake spring washer	
ML109	7	Spring pin	
ML209	8	Brake spring	
ML339	9	Spring	

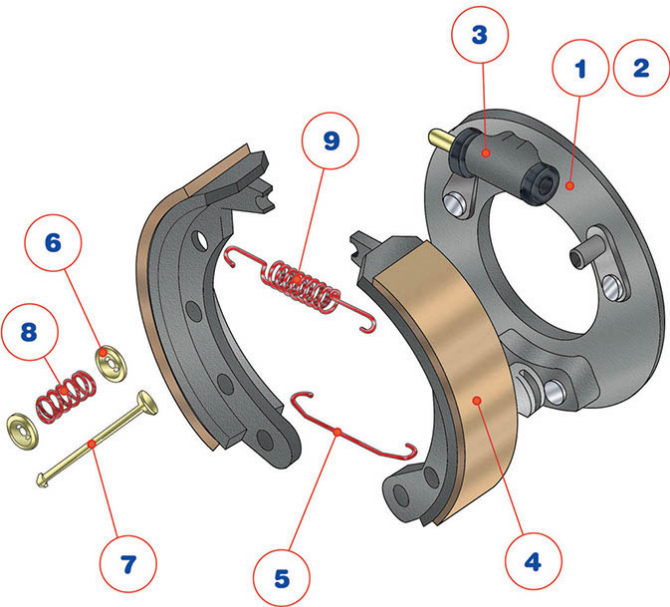

CATERPILLAR

Without parking brake

Cod.	Pos.	Description	Qty
MF304		Brake assembly RH	
MF305		Brake assembly LH	
PTC87	1	Plate RH	
PTC88	2	Plate LH	
CF118.2	3	Wheel cylinder	
CF118.2/A	3	Wheel cylinder	
GNF47	4	Brake shoe	
ML220	5	Spring	
ML221	6	Link	
ML223	7	Adjuster	
ML101	8	Brake spring washer	
ML222	9	Brake spring	
ML109	10	Spring pin	

