



BRAKES


BRAKE ASSY

CESAB 160x40 Hub 51mm

Hand adjuster and parking brake

DRAGO 150-180-200

Cod.	Pos.	Description	Qty
MF183		Brake assy RH	
MF184		Brake assembly LH	
PTC97	1	Brake plate Rx	
PTC98	2	Brake plate Lh	
CF098	3	Wheel Cylinder	
GNF32	4	Brake shoe neutral	
GNF33	5-6	Brake shoe Right lever	
GNF33/A	5-6	Brake shoe Left lever	
ML425	7	KNOTT	
ML426	8	KNOTT	
ML368	9	SPING	
ML129	10	Brake spring	
ML365	11	Spring	
ML366	12	Spacer	
ML367	13	Puscher	
ML424	14	Bolt-Adjuster	

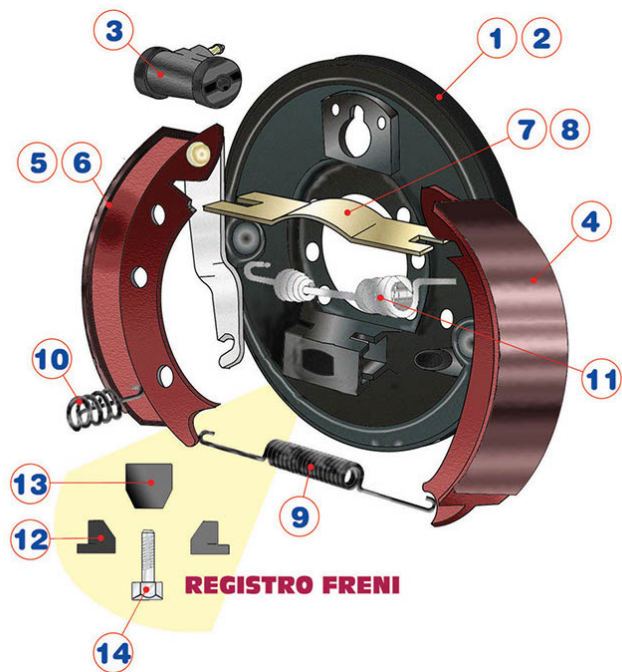


CESAB 180x40 Hub 72mm

Without parking brake

TRUCK

Cod.	Pos.	Description	Qty
MF269		Brake assembly	
CF513	2	Wheel cylinder	
GNF61	3-4	Brake shoe Neutral	
ML120	5	Brake spring	
ML130	6	Brake spring	
ML135	7	Brake spring	

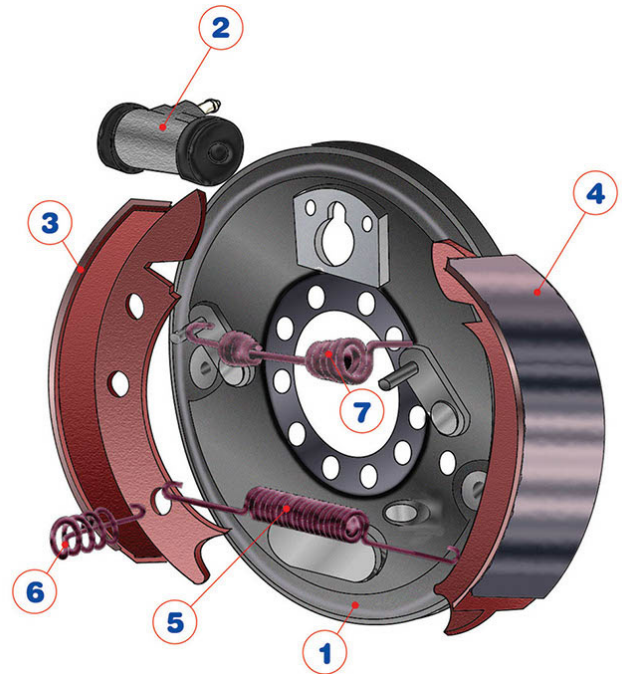



BRAKES


BRAKE ASSY

CESAB 200x40 Hub 85mm

Auto adjuster and parking brake

ECO 12-15 ECO12-20 Cuschion ECO B 8.1-10.1- 13.3 (fino al 1986)

Cod.	Pos.	Description	Qty
MF236		Brake assembly RH	
MF237		Brake assembly LH	
PTC62	1	Plate RH	
PTC63	2	Plate LH	
GNF1	3	Brake shoe Right lever	
GNF1/A	4	Brake shoe Left lever	
GNF2	5	Brake shoe Neutral	
CF502	6	Wheel cylinder	
RGF117	7	Brake manual adjuster	
ML218	8	Spring	
ML219	9	Spring	
ML118	10	Spring pin	
ML117	11	Washer	
ML119	12	Brake spring	
ML333	13	Lever	
ML334	14	Lever spring	
ML404	15	Washer	
ML335	16	Spring link	

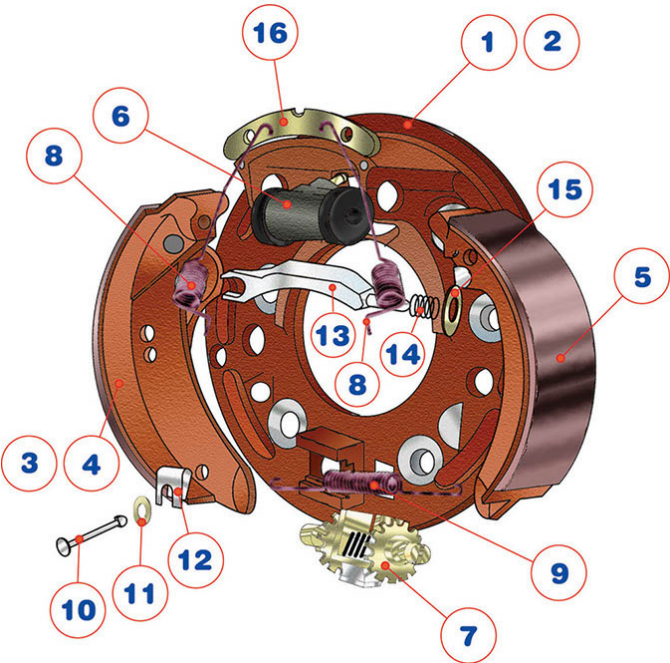


CESAB 203x40 Hub 85mm

Auto adjuster and parking brake

ECO B 8.1-10.1- 13.3 (dopo il 1986) ECO B 8.2-10.2-13.4 ECO C 10.1-13.2-15.3-15.4 ECO E 15.1 ECO F1

Cod.	Pos.	Description	Qty
MF308		Brake assembly RH	
MF309		Brake assembly LH	
PTC19	1	Plate RH	
PTC20	2	Plate LH	
CF502	3	Wheel cylinder	
GNF8	4	Brake shoe Neutral	
GNF7	5	Brake shoe Right lever	
GNF7/A	6	Brake shoe Left lever	
RGF113	7	Brake auto adjuster	
ML144	8	Brake spring	
ML150	9	Brake spring Flowing	
ML172	10	Brake spring	
ML134	11	Spring link	
ML226	12	Spring link	

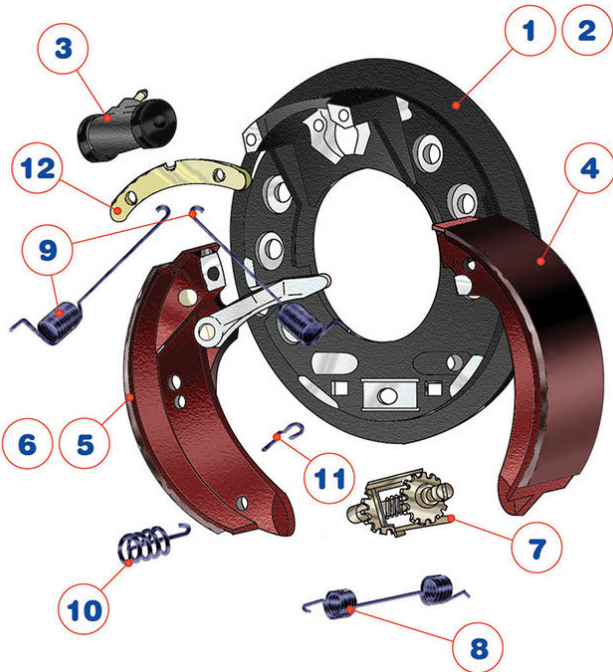



BRAKES


BRAKE ASSY

CESAB 203x60 Hub 85mm

Auto adjuster and parking brake

ECO KD 155-155.1 ECO KD 165-185-200

Cod.	Pos.	Description	Qty
MF301		Brake assembly RH	
MF302		Brake assembly LH	
PTC2	1	Plate RH	
PTC3	2	Plate LH	
CF502.1	3	Wheel cylinder	
GNF71	4	Brake shoe neutral	
GNF70	5	Brake shoe Right lever	
GNF70/A	6	Brake shoe Left lever	
RGF113	7	Brake auto adjuster	
ML144	8	Brake spring	
ML136	9	Brake spring	
ML159	10	Brake spring	
ML226	12	Spring link	

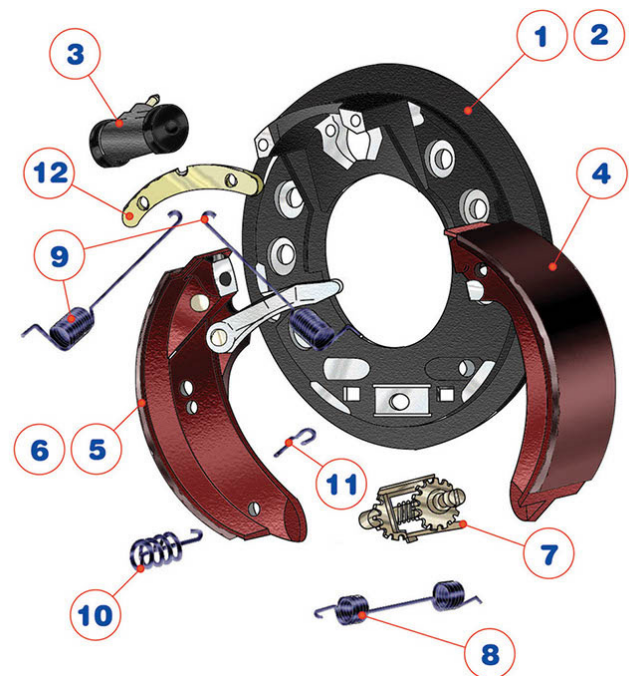


CESAB 250x45 Hub110mm

Auto adjuster and parking brake

ECO D 16.3-16.4


Cod.	Pos.	Description	Qty
MF174		Brake assembly RH	
MF175		Brake assembly LH	
PTC4	1	Plate RH	
PTC5	2	Plate LH	
CF502	3	Wheel cylinder	
GNF21	4	brake shoe neutral	
GNF20	5	brake shoe right lever	
GNF20/A	6	brake shoe left lever	
RGF112	7	Brake auto adjuster	
ML149	8	Brake spring	
ML147	9	Brake spring	
ML163	10	Brake spring	
ML134	11	Spring link	
ML376	12	Spring link	

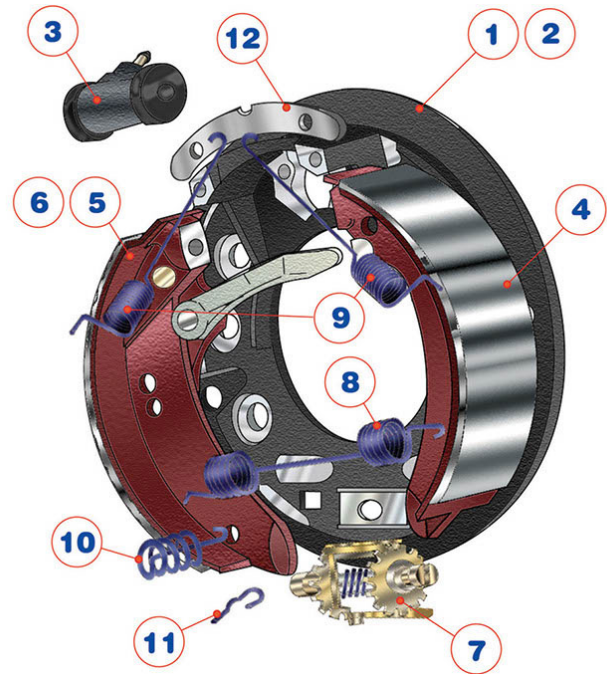

CESAB 250x55 Hub 115mm

ECO D 20.4-25.4 ECO H 18.3-20.1 ECO KD 16.1-18.1-20.1-30.1 ECO KD
210-250-300


Cod.	Pos.	Description	Qty
MF503		Brake assembly RH	
MF504		Brake assembly LH	
PTC10	1	Plate RH	
PTC11	2	Plate LH	
CF115	3	Wheel cylinder	
GNF31	4	Brake shoe Neutral	
GNF30	5	Brake shoe Right lever	
GNF30/A	6	Brake shoe left lever	
RGF112	7	Brake auto adjuster	
ML149	8	Brake spring	
ML147	9	Brake spring	
ML162	10	Brake spring	
ML134	11	Spring link	
ML291	12	Spring link	

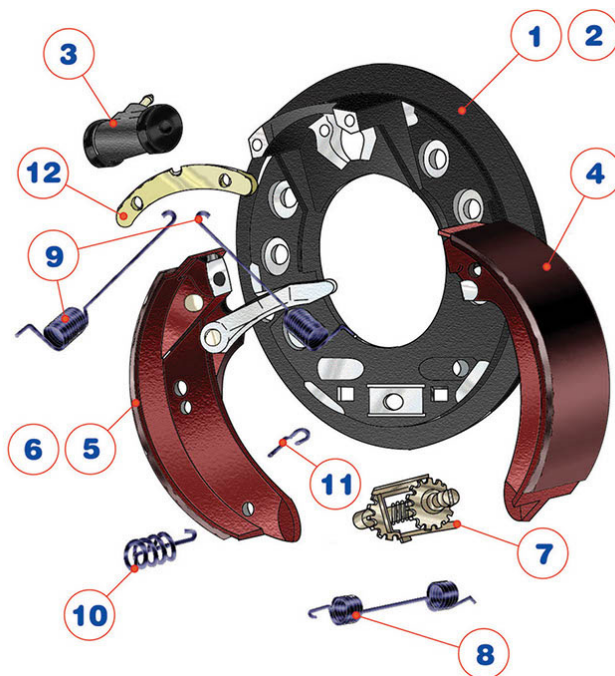


Auto adjuster and parking brake

ECO KL 25.1-30.1 ECO KL 250-300-350

Cod.	Pos.	Description	Qty
MF371		Brake assembly RH	
MF372		Brake assembly LH	
PTC25	1	Plate RH	
PTC26	2	Plate LH	
CF502B	3	Wheel cylinder	
GNF115	4	Brake shoe Neutral	
GNF114	5	Brake shoe Right lever	
GNF114/A	6	Brake shoe Left lever	
RGF111	7	Brake auto adjuster	
ML148	8	Brake spring	
ML145	9	Brake spring	
ML146	10	Brake spring	
TA61529		Hooking plate	

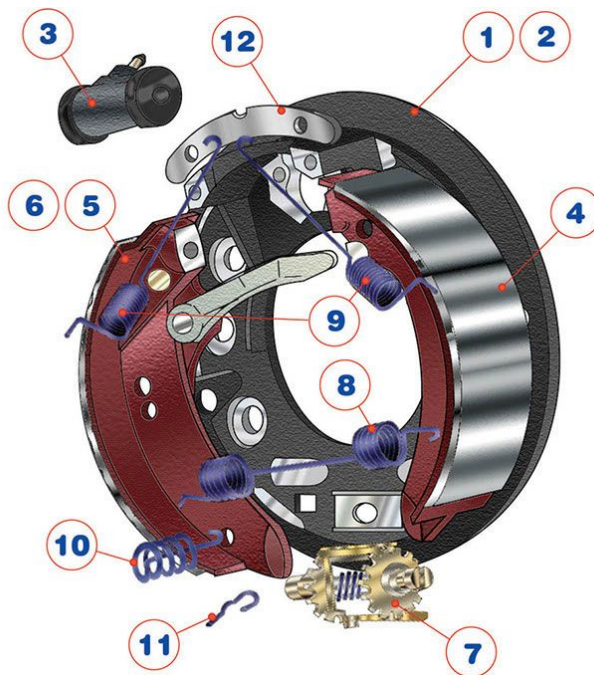

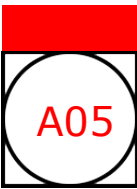

BRAKES


BRAKE ASSY

CESAB 325x80 Hub 155mm

Auto adjuster and parking brake

ECO P 50.1-60.1-85.2 210-250-300


Cod.	Pos.	Description	Qty
MF195		Brake assembly RH	
MF196		Brake assembly LH	
PTC16	1	Plate RH	
PTC17	2	Plate LH	
CF505	3	Wheel cylinder	
GNF41	4	Brake shoe Neutral	
GNF40	5	Brake shoe Right lever	
GNF40/A	6	Brake shoe Left lever	
RGF110	7	Brake auto adjuster	
ML142	8	Brake spring	
ML137	9	Brake spring	
ML155	10	Brake spring	

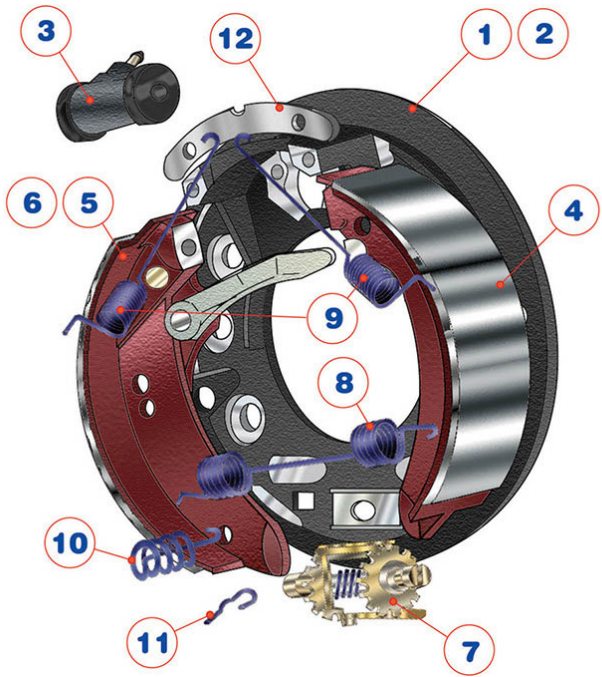

CESAB SI200. SI3500.

Cod.	Pos.	Description	Qty
MF228		Brake assembly	
CF512	1	Wheel cylinder	
GNF103	2	Brake shoe	



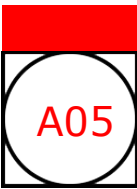


BRAKES

BRAKE ASSY

CESAB
SI1200. SI1800

Cod.	Pos.	Description	Qty
MF235		Brake assembly	
CF509	1	Wheel cylinder	
GNF102	2	Brake shoe	

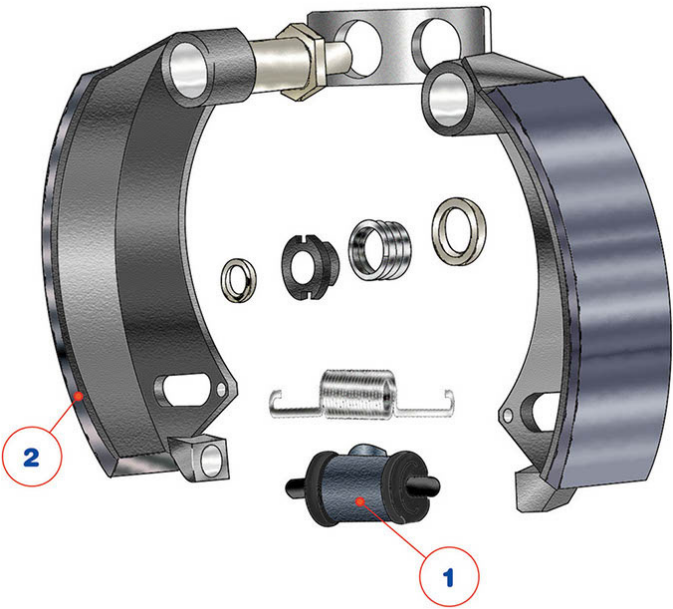



CESAB

Hand adjuster and parking brake

ECO D 12-15-17-20-25 ECO D 13.2-16.2-18.2-20.3-25.3 ECO H 13.2-16.2-18.2

Cod.	Pos.	Description	Qty
MF240		Brake assembly RH	
MF241		Brake assembly LH	
CF110	3	Wheel cylinder	
RGF115	4	Brake manual adjuster	

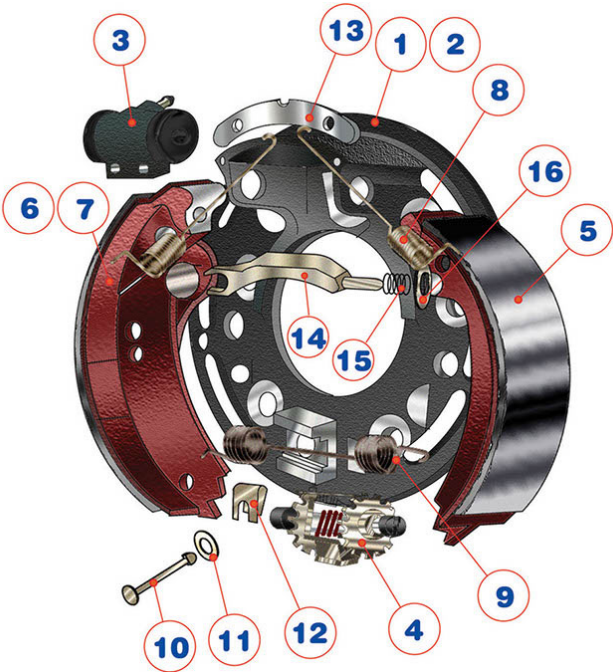

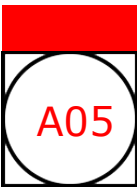

BRAKES


BRAKE ASSY

CESAB

Hand adjuster and parking brake

ECO L 20.2-25.2 ECO L 20.3-25.3-30.3

Cod.	Pos.	Description	Qty
MF242		Brake assembly RH	
MF243		Brake assembly LH	
CF515	3	Wheel cylinder	
RGF115	4	Brake manual adjuster	

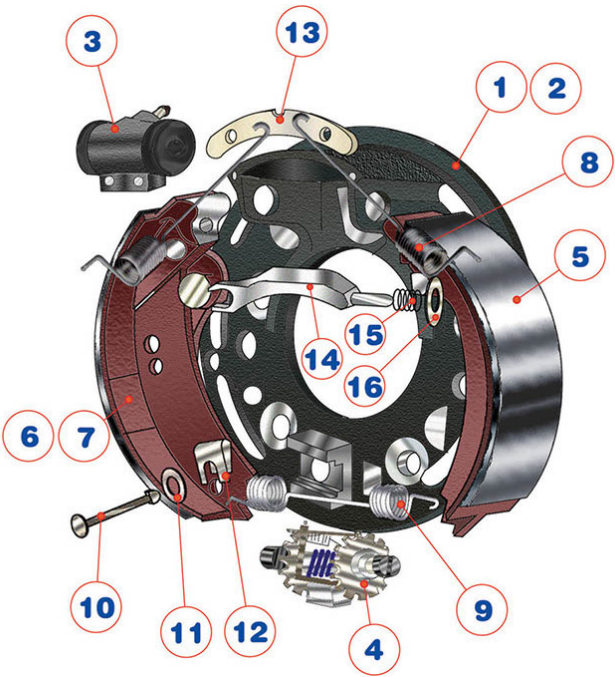

CESAB

Auto adjuster and parking brake

ECO D 13.3-16.3-18.3

Cod.	Pos.	Description	Qty
MF238		Brake assembly RH	
MF239		Brake assembly LH	
CF111	3	Wheel cylinder	
RGF116.1	4	Brake auto adjuster	
GNF130	5	Brake shoe neutral	
GNF131	6	Brake shoe right lever	
GNF131/A	7	Brake shoe left lever	

