


BRAKES

BRAKE ASSY

KOMATSU

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF282		Brake assembly RH	
MF283		Brake assembly LH	
CF078	3	Wheel cylinder	
RGF137	4	Brake manual adjuster RH	
RGF137/A	4	Brake manual adjuster LH	
GNF37	5	Brake shoe	
ML292	6	Lever RH	
ML292/A	6	Lever LH	
ML293	7	Lever RH	
ML293/A	7	Lever LH	
ML201	8	Lever spring	
ML294	9	Spring	
ML295	10	Spring RH	
ML266	10	Brake spring	
ML194	11	Spring link	
ML296	12	Adjuster cable	
ML297	13	Drive cable	
ML298	14	Adjuster lever Right	
ML298/A	14	Lever LH	

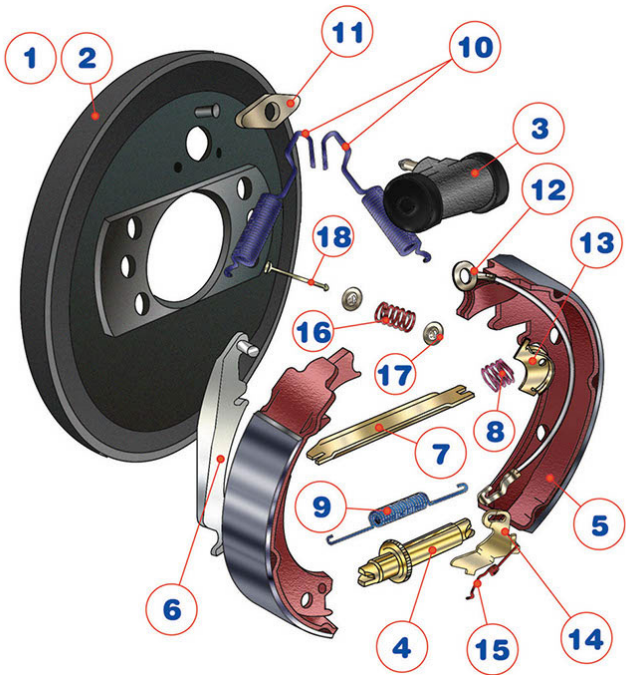

KOMATSU

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF284		Brake assembly RH	
MF285		Brake assembly LH	
PTC85	1	Plate RH	
PTC86	2	Plate LH	
CF092	3	Wheel cylinder	
CF092/A	3	Wheel cylinder	
RGF119	4	Brake manual adjuster RH	
RGF119/A	4	Brake manual adjuster LH	
GNF18	5	Brake shoe	
ML170	6	Adjuster cable	
ML165	7	Drive cable	
ML194	8	Spring link	
ML104	9	Adjuster lever Left	
ML105	9	Adjuster lever Right	
ML110	10	Brake spring	
ML108	11	Brake spring	
ML191	12	Lever RH	
ML192	12	Lever LH	
ML195	13	Lever	

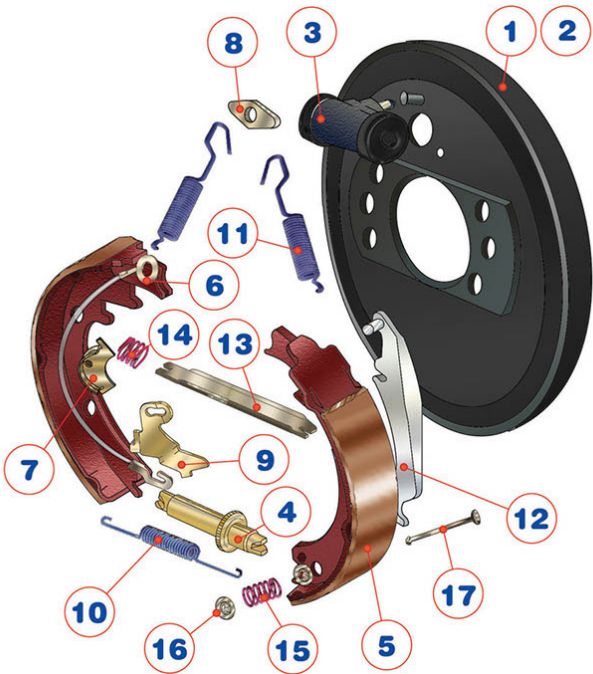




BRAKES

BRAKE ASSY

KOMATSU

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF322		Brake assembly RH	
MF323		Brake assembly LH	
CF132	3	Wheel cylinder	
RGF125	4	Brake manual adjuster RH	
RGF125/A	4	Brake manual adjuster LH	
GNFK34	5	Brake shoes kit	
ML266	6	Brake spring	
ML253	7	Spring	
ML151	8	Brake spring	
ML101	9	Brake spring washer	
ML116	10	Spring pin	
ML267	11	Lever RH	
ML267/A	11	Lever LH	
ML166	12	Drive cable	
ML265	13	Adjuster cable	
ML194	14	Spring link	
ML269	15	Brake shoe lever RH	
ML269/A	15	Lever LH	
ML270	16	Lever RH	

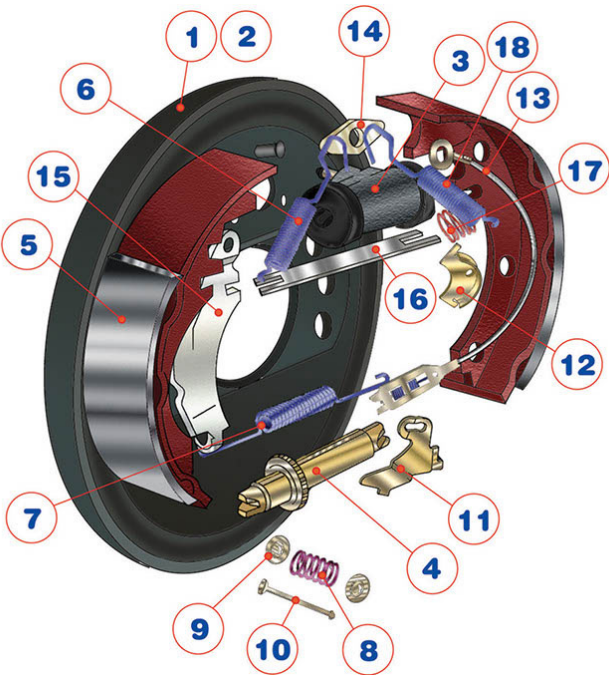


KOMATSU

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF328		Brake assembly RH	
MF329		Brake assembly LH	
CF133.1	3	Wheel cylinder	
RGF135	4	Brake manual adjuster RH	
RGF135/A	4	Brake manual adjuster LH	
GNF18	5	Brake shoe	
ML108	6	Brake spring	
ML302	7	Spring	
ML151	8	Brake spring	
ML101	9	Brake spring washer	
ML109	10	Spring pin	
ML165	11	Drive cable	
ML296	12	Adjuster cable	
ML194	13	Spring link	
ML224	14	Lever spring RH	
ML225	14	Spring LH	
ML191	15	Lever RH	
ML192	15	Lever LH	
ML107	16	Adjuster lever Right	

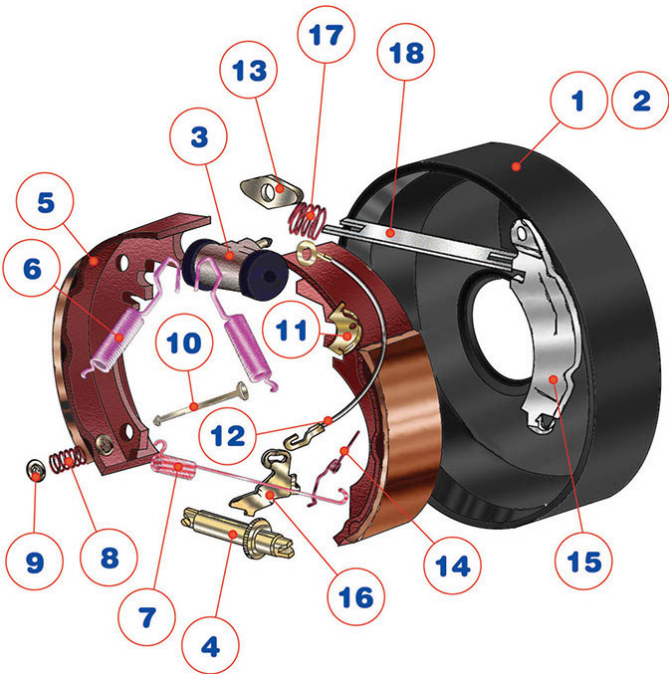

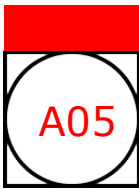

BRAKES

BRAKE ASSY

KOMATSU

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF334		Brake assembly RH	
MF335		Brake assembly LH	
PTC83	1	Plate RH	
PTC84	2	Plate LH	
CF136	3	Wheel cylinder	
CF136/A	3	Wheel cylinder	
RGF125	4	Brake manual adjuster RH	
RGF125/A	4	Brake manual adjuster LH	
GNF52	5	Brake shoe	
ML269	6	Brake shoe lever RH	
ML269/A	6	Lever LH	
ML270	7	Lever RH	
ML270/A	7	Lever LH	
ML201	8	Lever spring	
ML253	9	Spring	
ML266	10	Brake spring	
ML265	11	Adjuster cable	
ML165	12	Drive cable	
ML194	13	Spring link	

