




BRAKES

BRAKE ASSY

NISSAN 255x50 Hub 77mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF248		Brake assembly RH	
MF249		Brake assembly LH	
PTC58	1	Plate RH	
PTC59	2	Plate LH	
RGF119	3	Brake manual adjuster RH	
RGF119/A	3	Brake manual adjuster LH	
CF133	4	Wheel cylinder	
GNF18	5	Brake shoe	
GNFK35	5	Brake shoes kit	
ML108	8	Brake spring	
ML194	7	Spring link	
ML116	8	Spring pin	
ML110	9	Brake spring	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML107	12	Adjuster lever Right	
ML111	12	Adjuster lever Left	
ML224	13	Lever spring RH	
ML225	13	Spring LH	

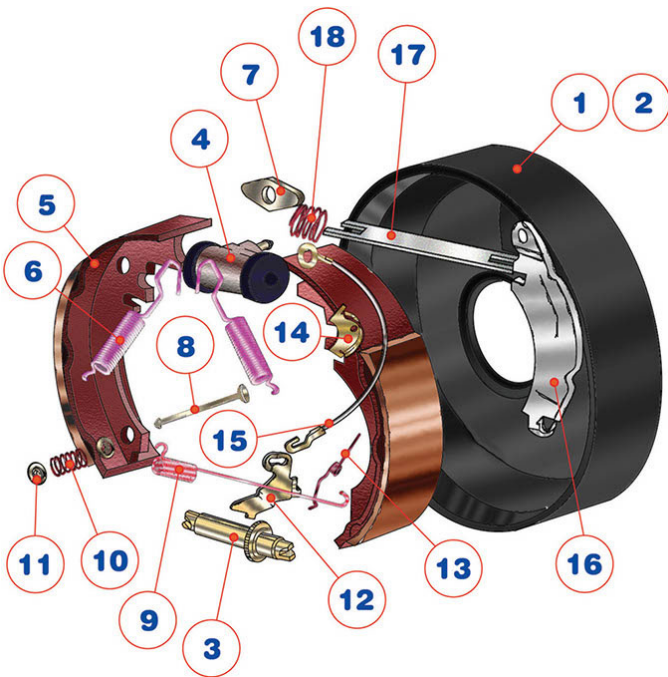

NISSAN 310x62 Hub 100mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF264		Brake assembly RH	
MF265		Brake assembly LH	
CF132	4	Wheel cylinder	
RGF137	4	Brake manual adjuster RH	
RGF137/A	4	Brake manual adjuster LH	
GNFK34	5	Brake shoes kit	
ML231	6	Adjuster cable	
ML165	7	Drive cable	
ML361	8	Lever RH	
ML361/A	8	Lever LH	
ML268	9	Spring RH	
ML268/A	9	Lever spring LH	
ML360	10	Bolt	
ML194	11	Spring link	
ML266	12	Brake spring	
ML294	13	Spring	
ML151	14	Brake spring	
ML101	15	Brake spring washer	
ML116	16	Spring pin	

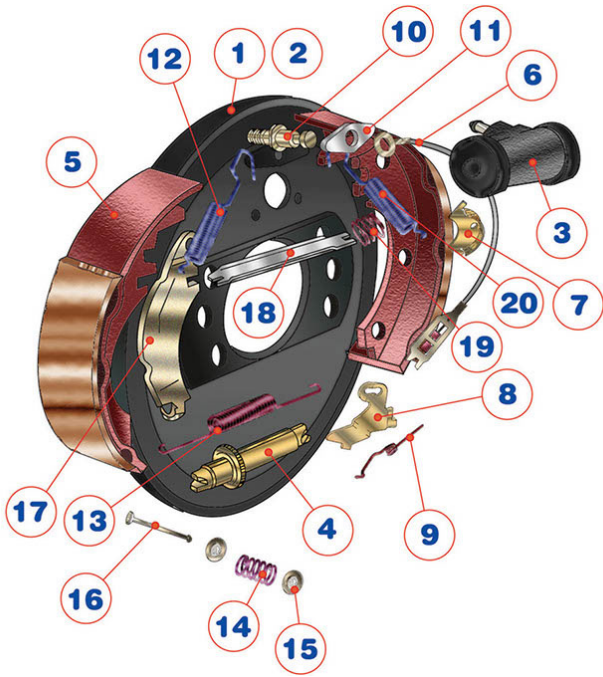




BRAKES

BRAKE ASSY

NISSAN

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF292		Brake assembly RH	
MF293		Brake assembly LH	
CF131	3	Wheel cylinder	
CF131/A	3	Wheel cylinder	
GNF59	4	Brake shoe right lever	
GNF59/A	4	Brake shoe left lever	
RGF123	5	Brake manual adjuster RH	
RGF123/A	5	Brake manual adjuster LH	
ML107	6	Adjuster lever Right	
ML111	6	Adjuster lever Left	
ML242	7	Spring	
ML189	8	Brake spring	
ML101	9	Brake spring washer	
ML116	10	Spring pin	
ML246	11	Bolt	
ML247	12	Link	
ML182	13	Link	
ML248	13	Link LH	
ML240	14	Spring RH	

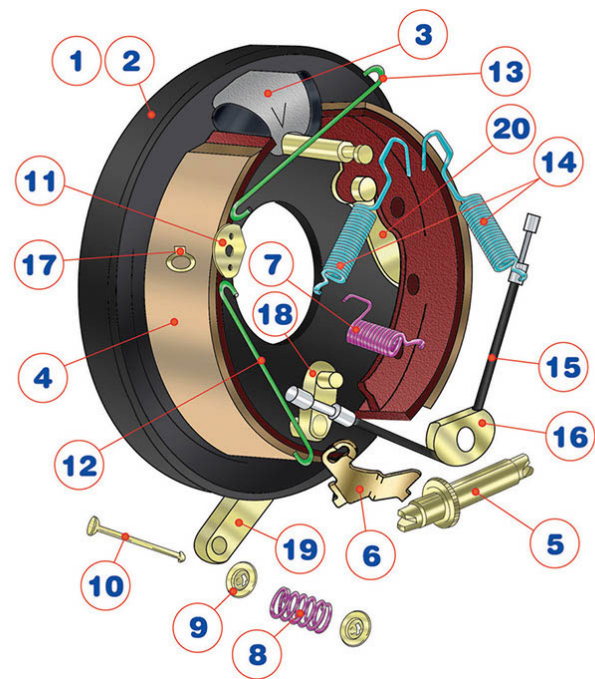

NISSAN

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF387		Brake assembly RH	
MF388		Brake assembly LH	
CF132	3	Wheel cylinder	
RGF137	4	Brake manual adjuster RH	
RGF137/A	4	Brake manual adjuster LH	
GNF14	5	Brake shoe	
GNFK34	6	Brake shoes kit	
ML169	6	Adjuster cable	
ML297	7	Drive cable	
ML298	8	Adjuster lever Right	
ML298/A	8	Lever LH	
ML268	9	Spring RH	
ML268/A	9	Lever spring LH	
ML360	10	Bolt	
ML194	11	Spring link	
ML266	12	Brake spring	
ML294	13	Spring	
ML151	14	Brake spring	
ML101	15	Brake spring washer	

