




BRAKES

BRAKE ASSY

TCM

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF330		Brake assembly RH	
MF331		Brake assembly LH	
PTC12	1	Plate RH	
PTC18	2	Plate LH	
RGF119	3	Brake manual adjuster RH	
RGF119/A	3	Brake manual adjuster LH	
CF134	4	Wheel cylinder	
CF134/A	4	Wheel cylinder	
GNF18	5	Brake shoe	
ML108	6	Brake spring	
ML194	7	Spring link	
ML196	8	Spring pin	
ML110	9	Brake spring	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML111	12	Adjuster lever Left	
ML107	12	Adjuster lever Right	
ML224	13	Lever spring RH	
ML225		Spring LH	

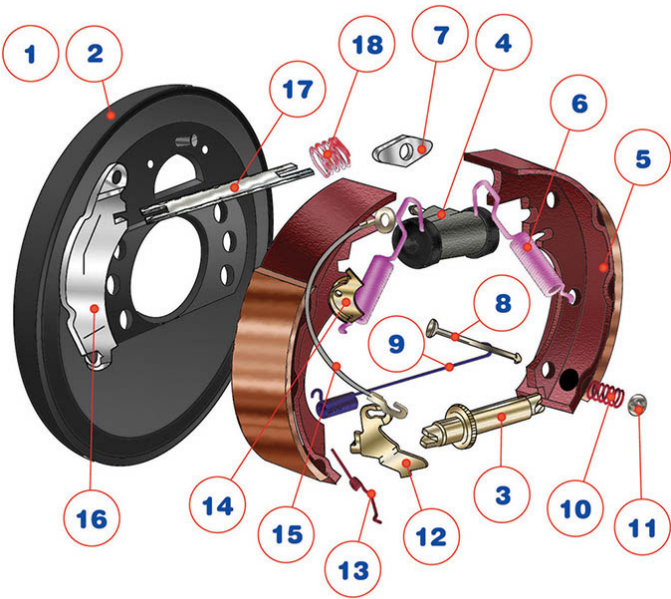

TCM

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF332		Brake assembly RH	
MF333		Brake assembly LH	
PTC101	1	Plate RH	
PTC102	2	Plate LH	
CF135	3	Wheel cylinder	
CF135/A	3	Wheel cylinder	
GNF19	4	Brake shoe	
RGF122	5	Brake manual adjuster RH	
RGF122/A	5	Brake manual adjuster LH	
ML387	6	Lever	
ML390	7	Lever spring	
ML381	8	Lever	
ML388	9	Spring	
ML389	10	Lever RH	
ML389/A	10	Lever LH	
ML392	11	Lever RH	
ML392/A	11	Lever LH	
ML393	12	Lever RH	
ML393/A	12	Lever LH	

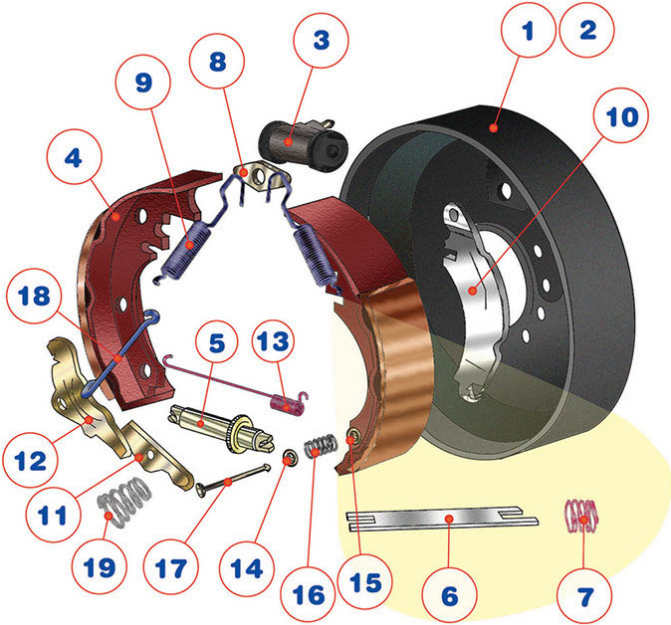




BRAKES

BRAKE ASSY

TCM

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF352		Brake assembly RH	
MF353		Brake assembly LH	
CF135	3	Wheel cylinder	
CF135/A	3	Wheel cylinder	
GNF19	4	Brake shoe	
RGF122	5	Brake manual adjuster RH	
RGF122/A	5	Brake manual adjuster LH	
ML387	6	Lever	
ML390	7	Lever spring	
ML381	8	Lever	
ML388	9	Spring	
ML389	10	Lever RH	
ML389/A	10	Lever LH	
ML401	11	Lever RH	
ML401/A	11	Lever LH	
ML403	12	Link	
ML399	13	Spring	
ML101	14	Brake spring washer	
ML400	15	Cup	

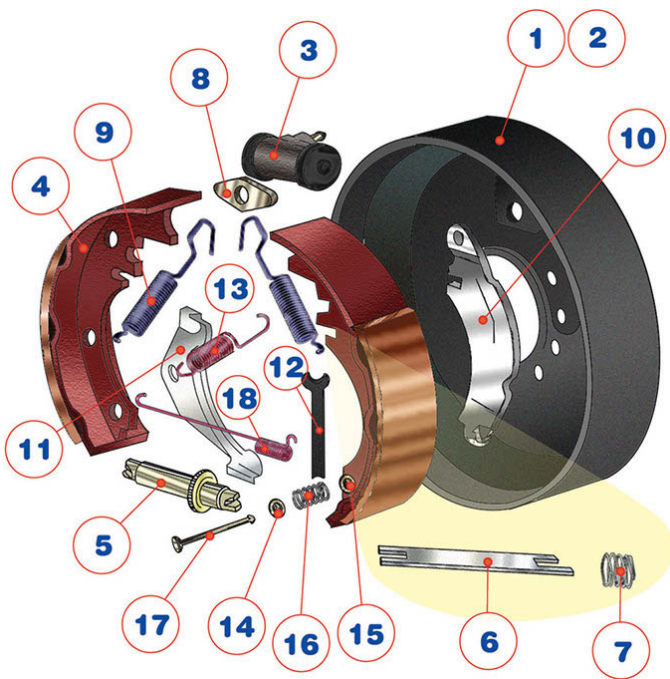

TCM

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF398		Brake assembly RH	
MF399		Brake assembly LH	
PTC125	1	Plate RH	
PTC126	2	Plate LH	
RGF119	3	Brake manual adjuster RH	
RGF119/A	3	Brake manual adjuster LH	
CF133	4	Wheel cylinder	
GNF18	5	Brake shoe	
ML108	6	Brake spring	
ML194	7	Spring link	
ML116	8	Spring pin	
ML110	9	Brake spring	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML104	12	Adjuster lever Left	
ML105	12	Adjuster lever Right	
ML224	13	Lever spring RH	
ML225	13	Spring LH	
ML165	14	Drive cable	

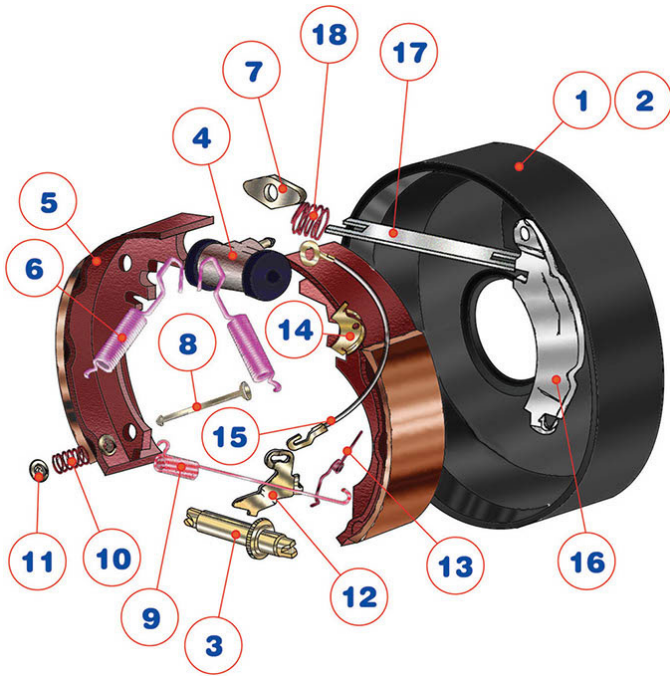

A05

Cod.	Pos.	Description	Qty
MF400		Brake assembly RH	
MF401		Brake assembly LH	
PTC125	1	Plate RH	
PTC126	2	Plate LH	
RGF119	3	Brake manual adjuster RH	
RGF119/A	3	Brake manual adjuster LH	
CF133	4	Wheel cylinder	
GNF18	5	Brake shoe	
ML108	6	Brake spring	
ML194	7	Spring link	
ML109	8	Spring pin	
ML110	9	Brake spring	
ML151	10	Brake spring	
ML101	11	Brake spring washer	
ML107	12	Adjuster lever Right	
ML111	12	Adjuster lever Left	
ML165	13	Drive cable	
ML170	14	Adjuster cable	

