




BRAKES

BRAKE ASSY

YALE-JUNGHEINRICH

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF280		Brake assembly RH	
MF281		Brake assembly LH	
PTC129	1	Plate RH	
PTC130	2	Plate LH	
CF169	3	Wheel cylinder	
CF169/A	3	Wheel cylinder	
GNFK16	4	Brake shoes kit	
ML307	5	Spring kit	
ML308	6	Lever	
ML194	7	Spring link	
RGF122	8	Brake manual adjuster RH	
RGF122/A	8	Brake manual adjuster LH	
ML309	9	Lever RH	
ML310	9	Lever LH	
ML311	10	Lever RH	
ML312	10	Lever LH	
ML313	11	Link	
ML489	12	Spring kit	

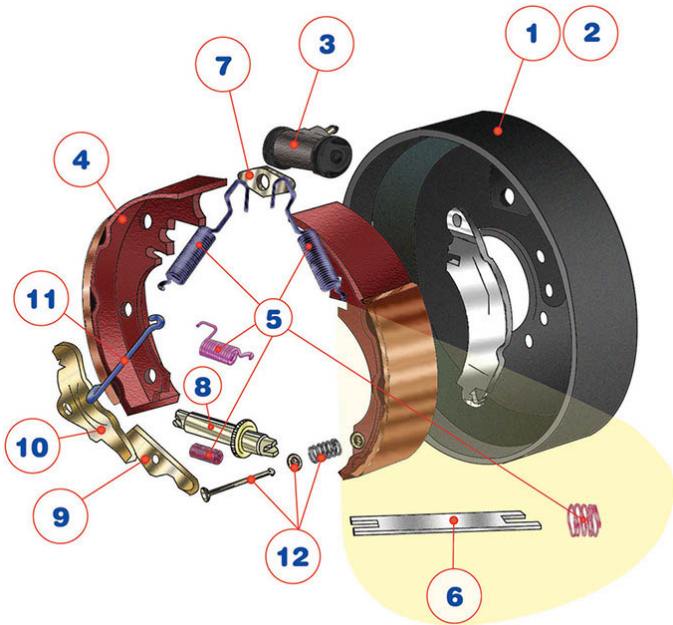


YALE-JUNGHEINRICH

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF324		Brake assembly RH	
MF325		Brake assembly LH	
CF132	3	Wheel cylinder	
GNFK14	4	Brake shoes kit	
RGF125	5	Brake manual adjuster RH	
RGF125/A	5	Brake manual adjuster LH	
ML151	6	Brake spring	
ML101	7	Brake spring washer	
ML116	8	Spring pin	
ML266	9	Brake spring	
ML253	10	Spring	
ML267	11	Lever RH	
ML267/A	11	Lever LH	
ML265	12	Adjuster cable	
ML166	13	Drive cable	
ML447	14	Pin	
ML269	15	Brake shoe lever RH	
ML269/A	15	Lever LH	
ML270	16	Lever RH	

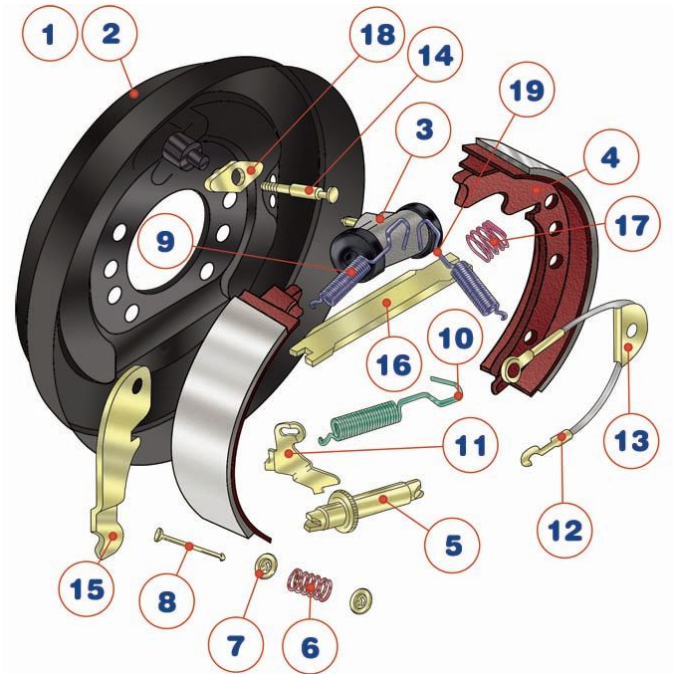

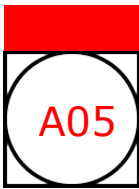


BRAKES

BRAKE ASSY

YALE-JUNGHEINRICH

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF380		Brake assembly RH	
MF381		Brake assembly LH	
CF214	3	Wheel cylinder	
RGF121	4	Brake manual adjuster RH	
GNF24	5	Brake shoe Neutral	
GNF25	6	Brake shoe Right lever	
GNF25/A	6	Brake shoe Left lever	
ML443	7	Spring	
ML444	8	Brake spring	
ML217	9	Spring	
ML236	10	Lever	
ML235	11	Spring link	

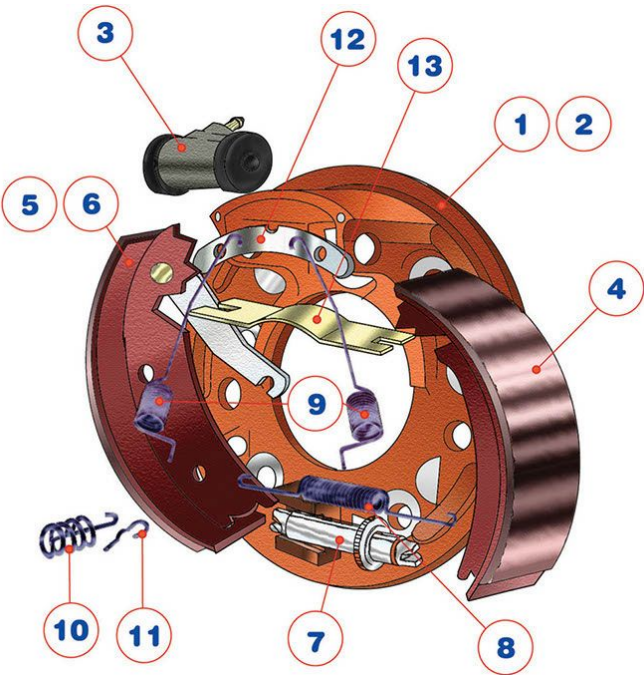

YALE-JUNGHEINRICH

Hand adjuster

Cod.	Pos.	Description	Qty
MF386		Brake assembly RH	
PTC109	1	Plate RH	
CF508	2	Wheel cylinder	
GNF122	3	Brake shoe Neutral	
ML453	4	Spring	
ML454	5	Spring	

