


BRAKES

BRAKE ASSY

CLARK


Parking brake

Cod.	Pos.	Description	Qty
MF176		Brake assembly	
GNFK12	1	Brake shoes kit Parking brake clark C500	
ML303	2	Spring	
ML304	3	Spring	

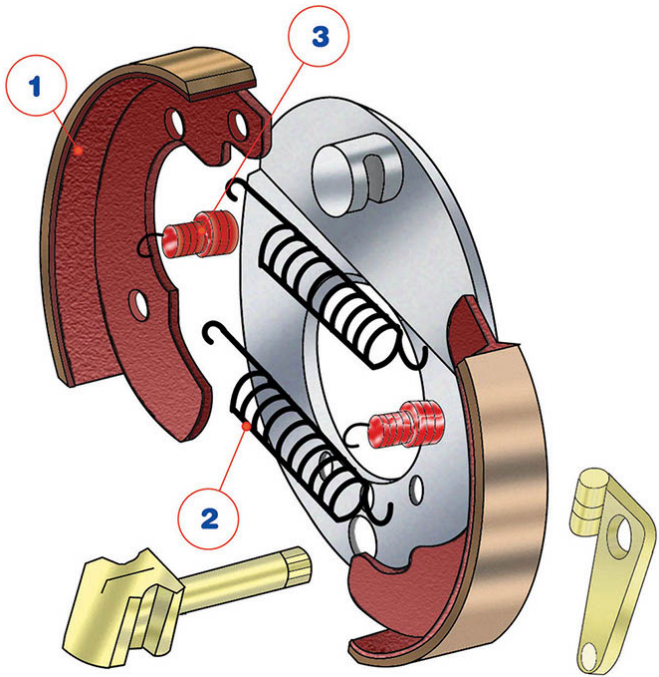

CLARK

Cod.	Pos.	Description	Qty
MF288		Brake assembly	
CF101	1	Wheel cylinder	
GNF39	2	Brake shoe	
ML230	3	Springs kit	
ML234	4	Brake spring washer	
ML233	5	Brake spring	
ML232	6	Spring pin	
ML414	7	Drive shoe	
PTC92	8	Plate	
SP818	9	Bleeder screws kit	
SP818/A	9	Bleeder screws kit	

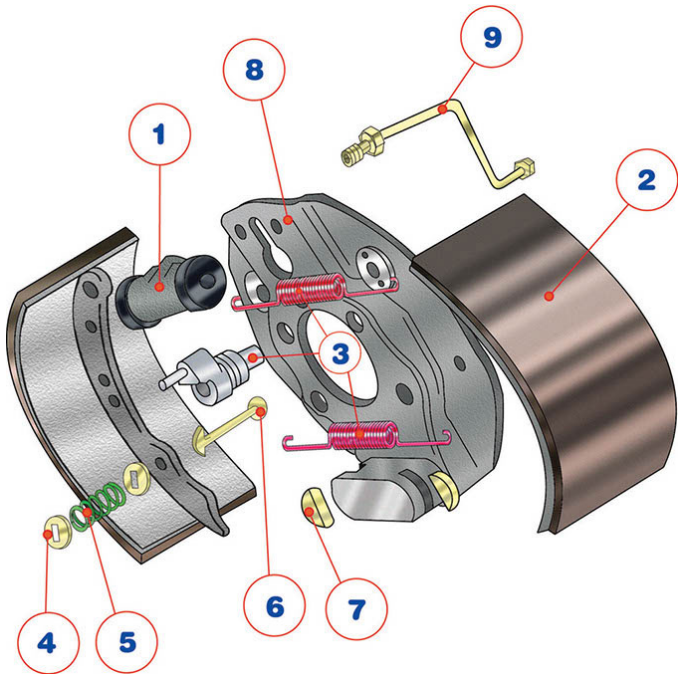




BRAKES

BRAKE ASSY

CLARK

Hand adjuster and parking brake


Cod.	Pos.	Description	Qty
MF348		Brake assembly RH	
MF349		Brake assembly LH	
CF039	3	Wheel cylinder	
CF039/A	3	Wheel cylinder	
RGF108	4	Brake manual adjuster RH	
RGF108/A	4	Brake manual adjuster LH	
GNFK22	5	Brake shoes kit	
ML417	6	Spring	
ML416	7	Spring	
ML419	8	Lever	
ML418	9	Lever spring	
ML165	10	Drive cable	
ML237	11	Cable	
ML107	12	Adjuster lever Right	
ML111	12	Adjuster lever Left	
ML151	13	Brake spring	
ML101	14	Brake spring washer	
ML116	15	Spring pin	
ML415	16	Lever RH	

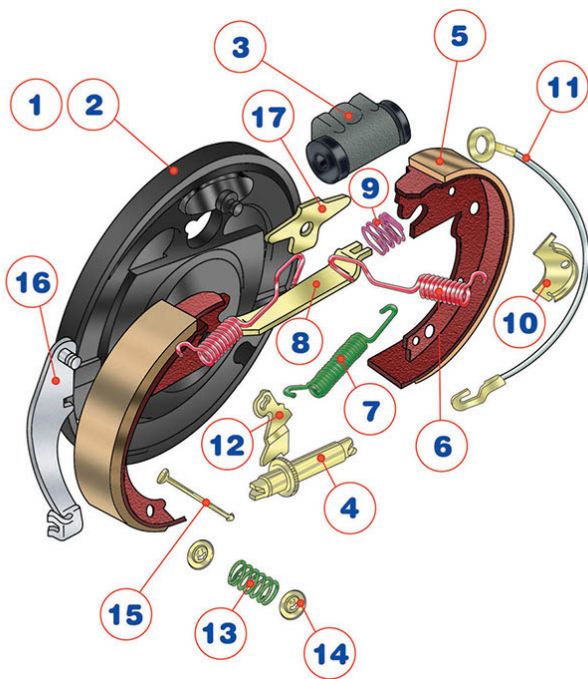


CLARK

Hand adjuster

Cod.	Pos.	Description	Qty
MF354		Brake assembly RH	
MF355		Brake assembly LH	
CF104	3	Wheel cylinder	
RGF128	4	Brake manual adjuster RH	
RGF128/A	4	Brake manual adjuster LH	
GNF35	5	Brake shoe	
ML205	6	Adjuster spring RH	
ML206	6	Adjuster spring LH	
ML132	7	Brake spring	
ML124	8	Brake spring	
ML131	9	Brake spring	
ML116	10	Spring pin	
ML433	11	Link	
ML434	12	Link	
ML436	13	Lever RH	
ML437	13	Lever LH	
ML435	14	Drive link	

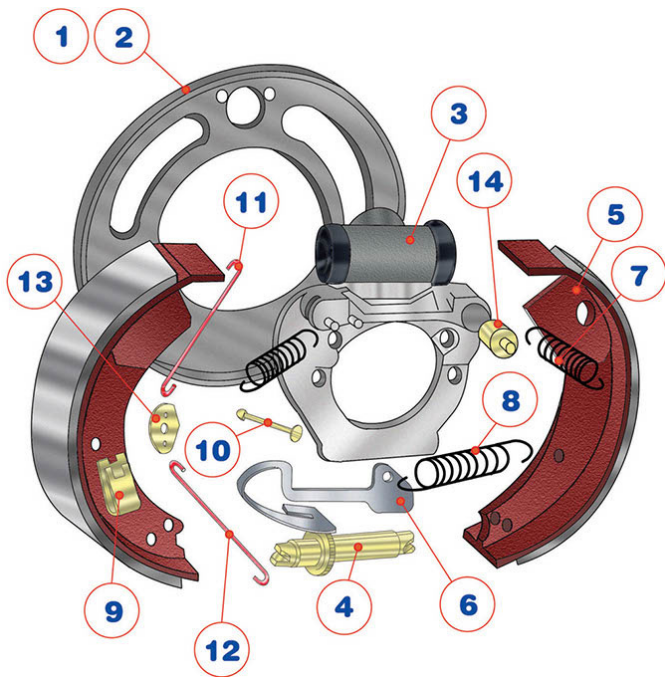

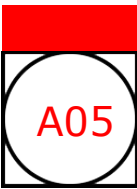

BRAKES

BRAKE ASSY

CLARK 300x55

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF270		Brake assembly RH	
MF271		Brake assembly LH	
CF028	1	Wheel cylinder	
RGF102	2	Brake auto adjuster	
GNFK33	3	Brake shoes kit	
ML344	4	Lever	
ML346	5	Lever spring	
ML345	6	Cup	
ML238	7	Spring	
ML343	8	Spring	
ML341	9	Brake spring	
ML342	10	Spring pin	
ML234	11	Brake spring washer	
ML276	12	Spring link	

