



 
BRAKES

BRAKE ASSY

KNOTT 160x40 Hub 51mm

Hand adjuster

Cod.	Pos.	Description	Qty
MF412		Brake assy	
CF513	2	Wheel cylinder	
GNF32	3	Brake shoe neutral	
ML129	4	Brake spring	
ML365	5-6	Spring	
ML366	7	Spacer	
ML367	8	Puscher	
ML424	9	Bolt-Adjuster	

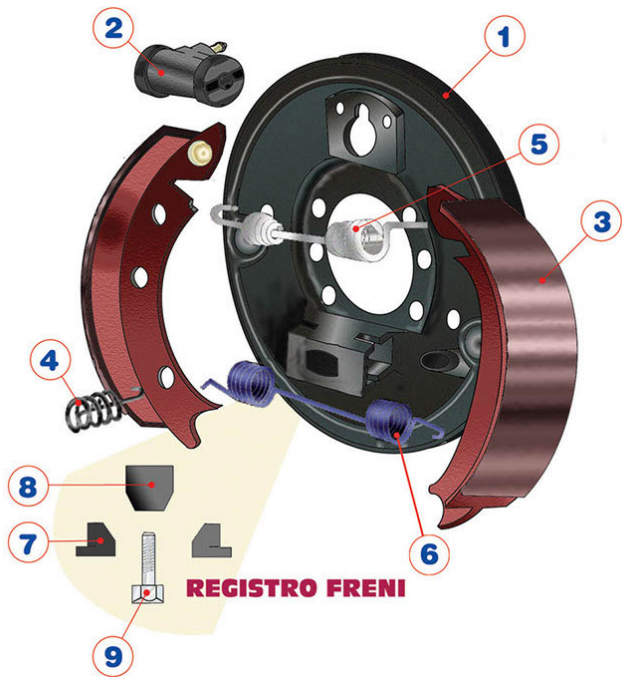


KNOTT 160x40 Hub 51mm

Hand adjuster and parking brake

Cesab

Cod.	Pos.	Description	Qty
MF183		Brake assy RH	
MF184		Brake assembly LH	
PTC97	1	Brake plate Rx	
PTC98	2	Brake plate Lh	
CF098	3	Wheel Cylinder	
GNF32	4	Brake shoe neutral	
GNF33	5-6	Brake shoe Right lever	
GNF33/A	5-6	Brake shoe Left lever	
ML425	7	KNOTT	
ML426	8	KNOTT	
ML368	9	SPING	
ML129	10	Brake spring	
ML365	11	Spring	
ML366	12	Spacer	
ML367	13	Puscher	
ML424	14	Bolt-Adjuster	

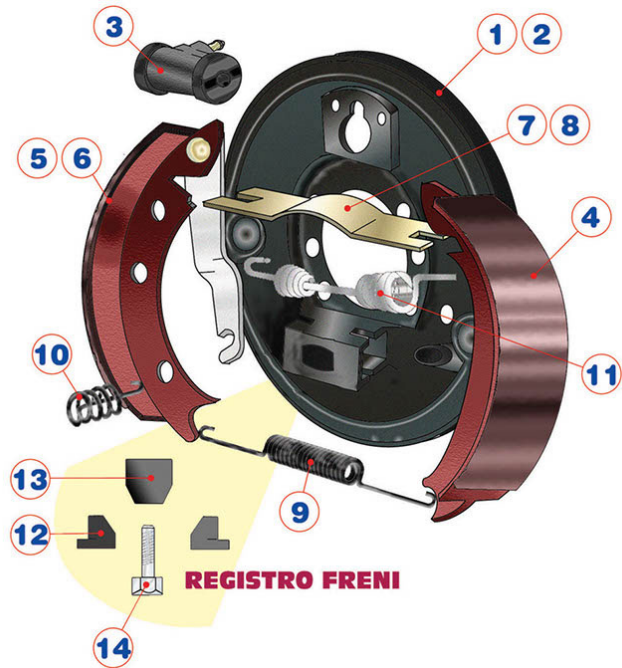 




BRAKES

BRAKE ASSY

KNOTT 170x40 Hub 72mm

Hand adjuster and parking brake


Cod.	Pos.	Description	Qty
MF805		Brake assembly RH	
MF806		Brake assembly LH	
PTC34	1	Plate RH	
PTC35	2	plate LH	
CF502B	3	Wheel cylinder	
GNF161	4	Brake shoe neutral	
GNF160	5	Brake shoe right lever	
GNF160/A	6	Brake shoe left lever	
RGF121	7	Brake manual adjuster RH	
ML430	8	Spring	
ML215	9	Spring	
ML513	10	Spring	
ML514	12	Spring link	
ML515	13	Lever RH	
ML516	13	Lever LH	

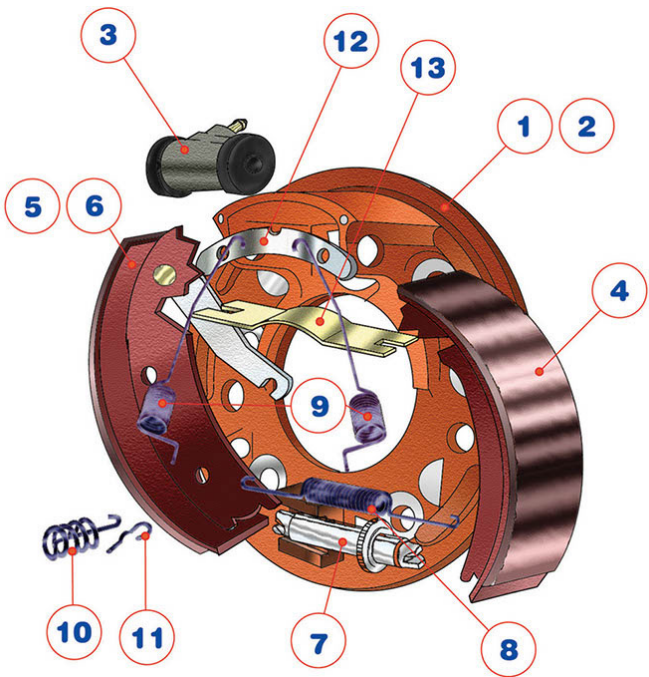 


KNOTT 170x40 Hub 72mm

Auto adjuster and parking brake (brake cable included)

Cod.	Pos.	Description	Qty
MF414		Brake assembly RH	
MF415		Brake assembly LH	
CF343	3	Wheel cylinder	
GNF158	4	Brake shoe neutral	
GNF159	5	Brake shoe Right lever	
GNF159/A	6	Brake shoe Left lever	
RGF151	7	Brake auto adjuster	
ML135	8	Brake spring	
ML215	9	Spring	
ML538	10	Brake spring	
ML514	12	Spring link	
ML515	13	Lever RH	
ML516	13	Lever LH	
CV539	14	Brake cable	

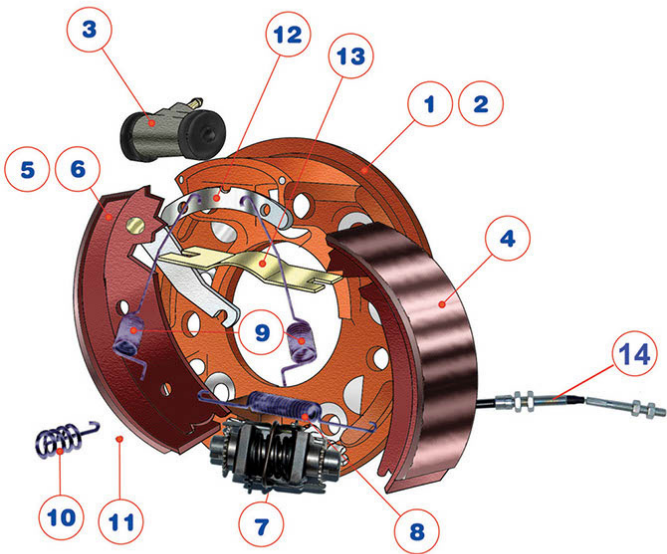 

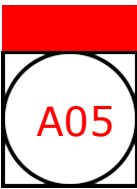 

BRAKES


BRAKE ASSY

KNOTT 180x40 Hub 72mm

Hand adjuster

Cesab


Cod.	Pos.	Description	Qty
MF269		Brake assembly	
CF513	2	Wheel cylinder	
GNF61	3-4	Brake shoe Neutral	
ML120	5	Brake spring	
ML130	6	Brake spring	
ML135	7	Brake spring	

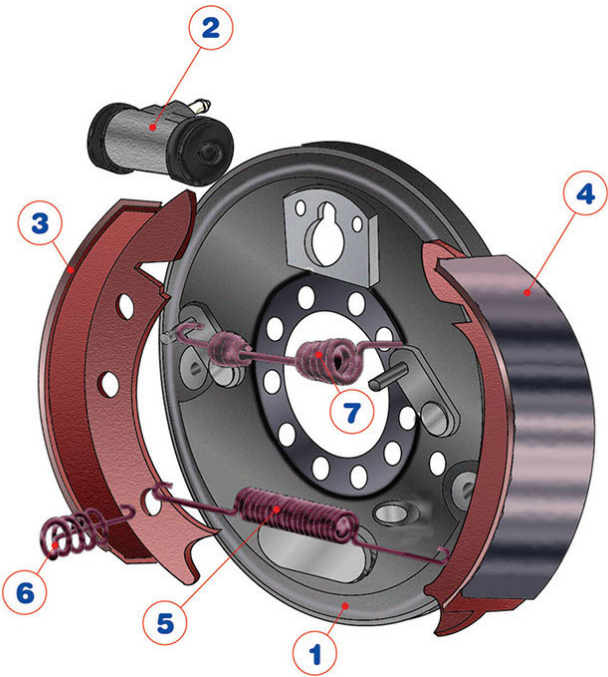 

KNOTT 180x40 Hub 72mm

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF253		Brake assembly RH	
MF254		Brake assembly LH	
PTC13	1	Plate RH	
PTC14	2	Plate LH	
CF513	3	Wheel cylinder	
GNF61	4	Brake shoe Neutral	
GNF60	5	Brake shoe Right lever	
GNF60/A	6	Brake shoe Left lever	
ML338	7	Lever RH	
ML340	8	Lever LH	
ML120	9	Brake spring	
ML130	10	Brake spring	
ML135	11	Brake spring	

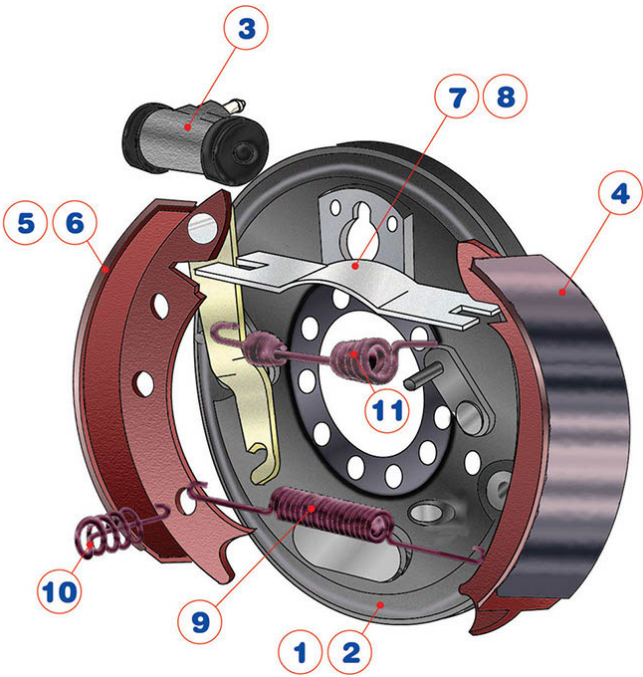 




BRAKES

BRAKE ASSY

KNOTT 200x40 Hub 85mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF172		Brake assembly RH	
MF173		Brake assembly LH	
PTC19	1	Plate RH	
PTC20	2	Plate LH	
CF502	3	Wheel cylinder	
GNF111	4	Brake shoe Neutral	
GNF110	5	Brake shoe Right lever	
GNF110/A	6	Brake shoe Left lever	
RGF113	7	Brake auto adjuster	
ML144	8	Brake spring	
ML150	9	Brake spring Flowing	
ML128	10	Brake spring	
ML226	12	Spring link	

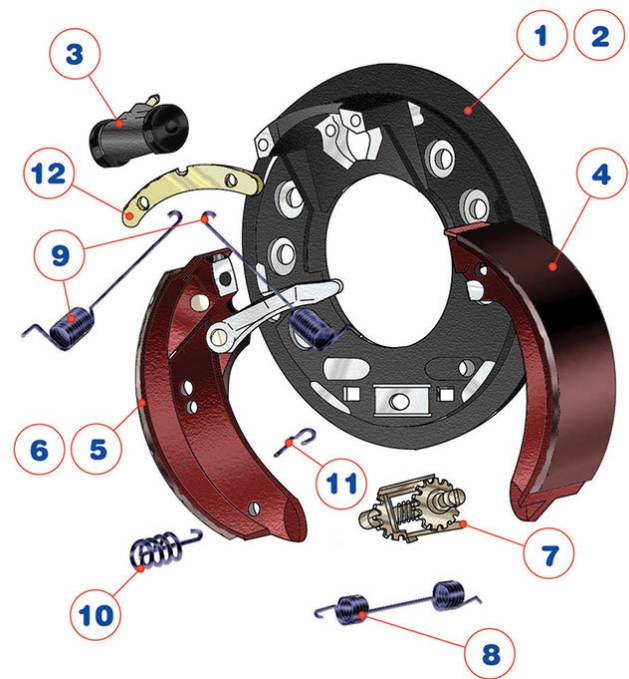 

KNOTT 200x40 Hub 85mm

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF177		Brake assembly RH	
MF178		Brake assembly LH	
PTC19	1	Plate RH	
PTC20	2	Plate LH	
CF502	3	Wheel cylinder	
GNF111	4	Brake shoe Neutral	
GNF110	5	Brake shoe Right lever	
GNF110/A	6	Brake shoe Left lever	
RGF101	7	Brake manual adjuster	
ML120	8	Brake spring	
ML150	9	Brake spring Flowing	
ML128	10	Brake spring	
ML226	12	Spring link	

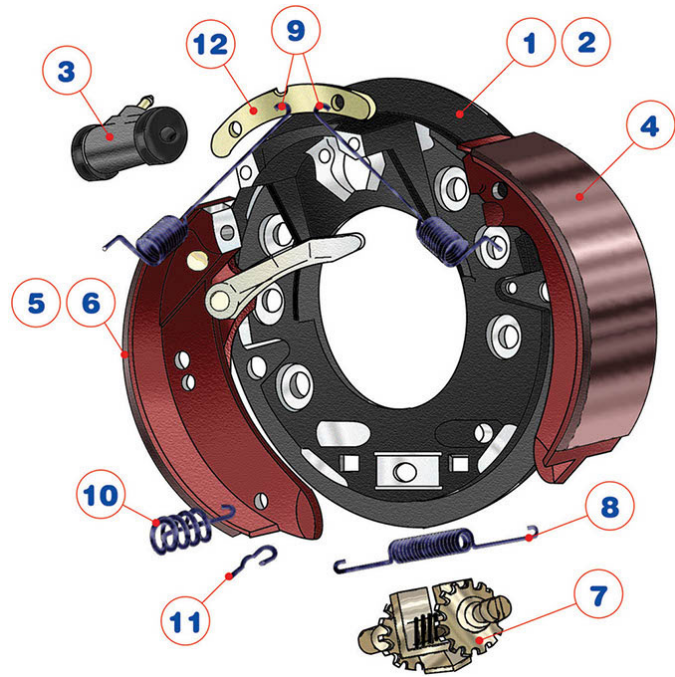 




BRAKES

BRAKE ASSY

KNOTT 200x40 Hub 108mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF179		Brake assembly RH	
MF180		Brake assembly LH	
PTC107	1	Plate RH	
PTC108	2	Plate LH	
CF502	3	Wheel cylinder	
GNF6	4	Brake shoe Neutral	
GNF5	5	Brake shoe Right lever	
GNF5/A	6	Brake shoe Left lever	
RGF105	7	Brake auto adjuster	
ML144	8	Brake spring	
ML150	9	Brake spring Flowing	
ML128	10	Brake spring	
ML226	12	Spring link	

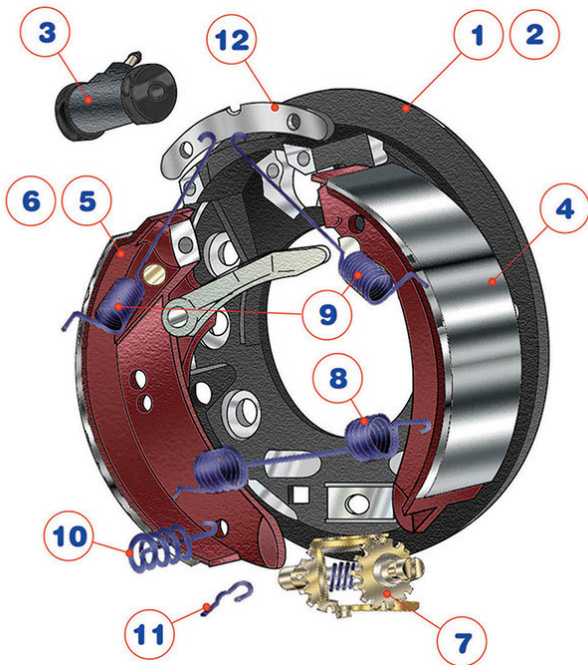 

KNOTT 200x40 Hub 108mm

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF197		Brake assembly RH	
MF198		Brake assembly LH	
PTC107	1	Plate RH	
PTC108	2	Plate LH	
CF502	3	Wheel cylinder	
GNF6	4	Brake shoe Neutral	
GNF5	5	Brake shoe Right lever	
GNF5/A	6	Brake shoe Left lever	
RGF100	7	Brake manual adjuster	
ML120	8	Brake spring	
ML150	9	Brake spring Flowing	
ML128	10	Brake spring	
ML226	12	Spring link	

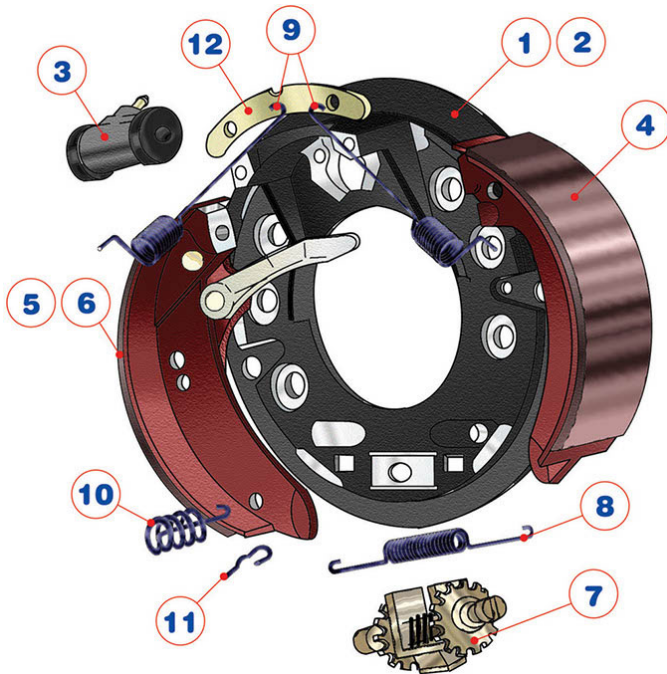 



BRAKES


BRAKE ASSY

KNOTT 200x40 Hub 85mm

Hand adjuster and wear brake alarm

Cesab


Cod.	Pos.	Description	Qty
MF373		Brake assembly RH	
MF374		Brake assembly LH	
PTC99	1	Plate RH	
PTC100	2	Plate LH	
CF502	3	Wheel cylinder	
GNF106	4	Brake shoe Neutral with alert cable right	
GNF107	4	Brake shoe Neutral with alert cable left	
GNF104	5	Brake shoe Right lever	
GNF105	6	Brake shoe Left lever	
RGF140	7	Brake manual adjuster	
ML430	8	Spring	
ML218	9	Spring	
ML173	10	Brake spring	
ML335	11	Spring link	
ML229	12	Brake consume cable	
ML333	13	Lever	
ML334	14	Lever spring	
ML404	15	Washer	

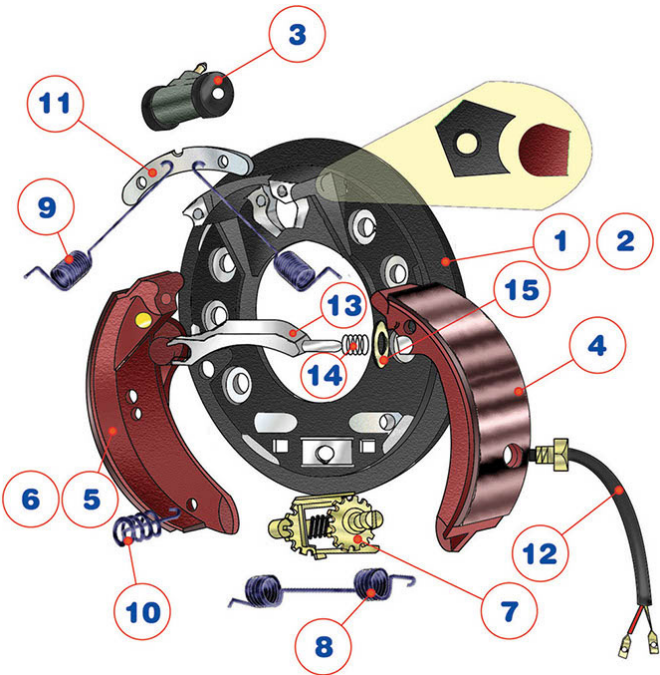 

KNOTT 203x40 Hub 85mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF308		Brake assembly RH	
MF309		Brake assembly LH	
PTC19	1	Plate RH	
PTC20	2	Plate LH	
CF502	3	Wheel cylinder	
GNF8	4	Brake shoe Neutral	
GNF7	5	Brake shoe Right lever	
GNF7/A	6	Brake shoe Left lever	
RGF113	7	Brake auto adjuster	
ML144	8	Brake spring	
ML150	9	Brake spring Flowing	
ML172	10	Brake spring	
ML134	11	Spring link	
ML226	12	Spring link	

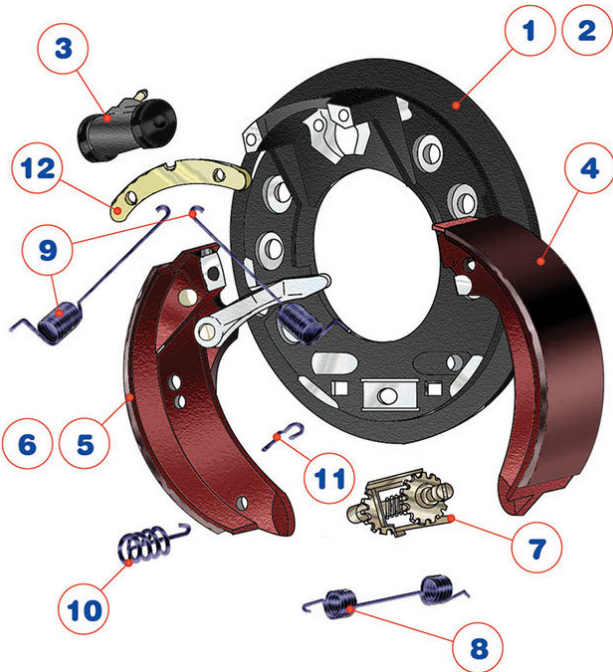 




BRAKES

BRAKE ASSY

KNOTT 203x60 Hub 85mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF301		Brake assembly RH	
MF302		Brake assembly LH	
PTC2	1	Plate RH	
PTC3	2	Plate LH	
CF502.1	3	Wheel cylinder	
GNF71	4	Brake shoe neutral	
GNF70	5	Brake shoe Right lever	
GNF70/A	6	Brake shoe Left lever	
RGF113	7	Brake auto adjuster	
ML144	8	Brake spring	
ML136	9	Brake spring	
ML159	10	Brake spring	
ML226	12	Spring link	

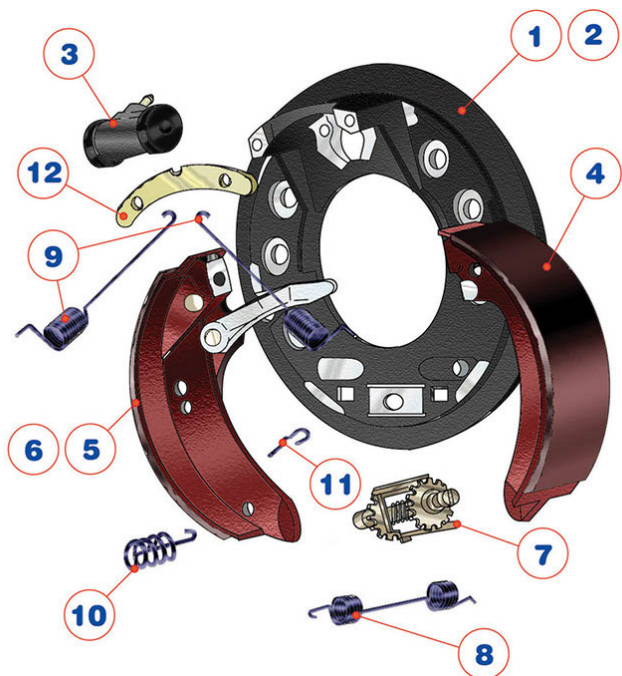 


KNOTT 203x60 Hub 85mm

Auto adjuster and wear brake alarm

Cod.	Pos.	Description	Qty
MF376		Brake assembly RH	
MF377		Brake assembly LH	
CF502	3	Wheel cylinder	
GNF74	4	Brake shoe neutral with alert cable right	
GNF75	4	Brake shoe neutral with alert cable left	
GNF72	5	Brake shoe Right lever	
GNF73	6	Brake shoe Left lever	
RGF141	7	Brake auto adjuster	
ML219	8	Spring	
ML218	9	Spring	
ML159	10	Brake spring	
ML335	11	Spring link	
ML229	12	Brake consume cable	
ML333	13	Lever	
ML334	14	Lever spring	
ML404	15	Washer	

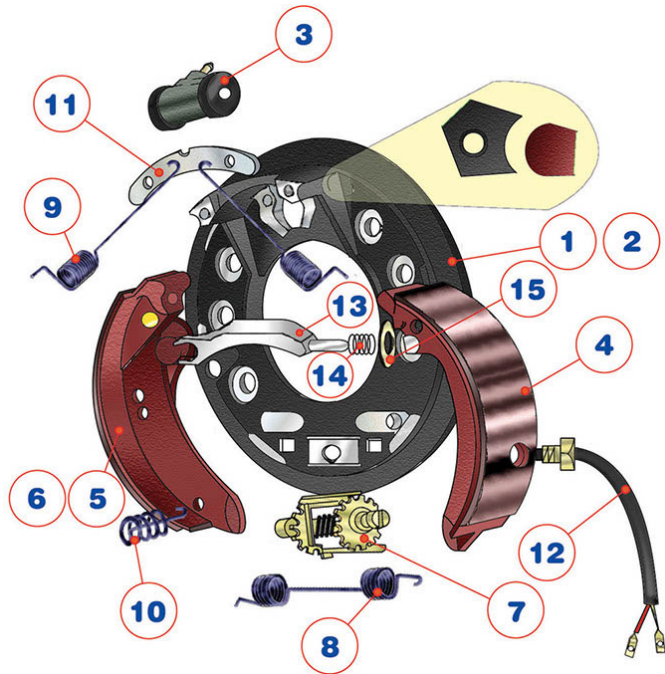 

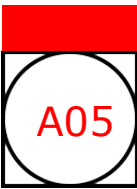 


BRAKES

BRAKE ASSY

KNOTT 230x50 Hub 72mm 8 holes

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF260		Brake assembly RH	
MF261		Brake assembly LH	
PTC73	1	Plate RH	
PTC74	2	Plate LH	
CF115	3	Wheel cylinder	
RGF139	4	Brake auto adjuster	
GNF57	5	Brake shoe neutral	
GNF58	6	Brake shoe right lever	
GNF58/A	7	Brake shoe Left lever	
ML122	8	Brake spring	
ML219	9	Spring	
ML161	10	Brake spring	
ML407	12	Spring link	

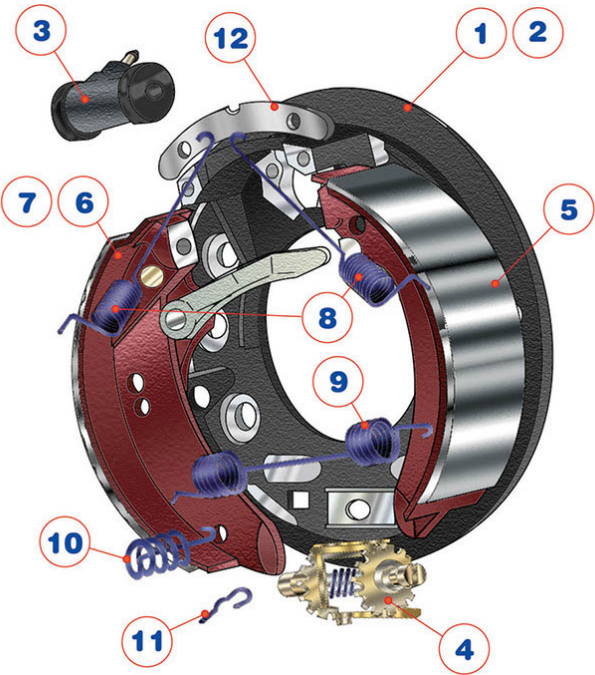 

KNOTT 230x50

With parking brake

Cod.	Pos.	Description	Qty
MF391		Brake assembly RH	
MF392		Brake assembly LH	
CF115	3	Wheel cylinder	
RGF139	4	Brake auto adjuster	
RGF139	4	Brake auto adjuster	
GNF58	5	Brake shoe right lever	
GNF58/A	5	Brake shoe Left lever	
GNF57	6	Brake shoe neutral	
ML122	7	Brake spring	
ML219	8	Spring	
ML161	9	Brake spring	





BRAKES


BRAKE ASSY

KNOTT 245x60 Hub 115mm

Auto adjuster and parking brake

Cesab

Cod.	Pos.	Description	Qty
MF801		Brake assembly RH	
MF802		Brake assembly LH	
PTC48	1	Plate RH	
PTC49	2	Plate LH	
CF148	3	Wheel cylinder	
GNF64	4	Brake shoe Neutral	
GNF65	5	Brake shoe Right lever	
GNF65/A	6	Brake shoe Left lever	
RGF107	7	Brake auto adjuster	
ML228	8	Spring	
ML227	9	Spring	
ML152	10	Brake spring	
ML376	11	Spring link	
ML373	12	Lever	
ML374	13	Lever spring	
ML375	14	Lever washer	
ML134	15	Spring link	

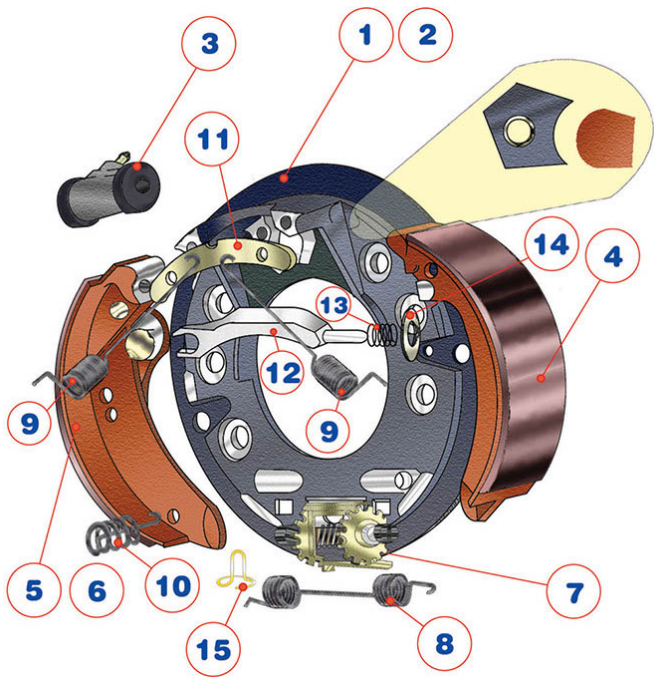 


KNOTT 245x60 Hub 115mm

Auto adjuster, wear brake alarm and parking brake

Cesab

Cod.	Pos.	Description	Qty
MF189		Brake assembly RH	
MF190		Brake assembly LH	
PTC48	1	Plate RH	
PTC49	2	Plate LH	
CF148	3	Wheel cylinder	
GNF44	4	Brake shoe neutral with alert cable right	
GNF45	5	Brake shoe neutral with alert cable left	
GNF43	6	Brake shoe Right lever	
GNF46	7	Brake shoe Left lever	
RGF107	8	Brake auto adjuster	
ML228	9	Spring	
ML227	10	Spring	
ML152	11	Brake spring	
ML376	12	Spring link	
ML229	13	Brake consume cable	
ML373	14	Lever	
ML374	15	Lever spring	
ML375	16	Lever washer	
ML134	17	Spring link	

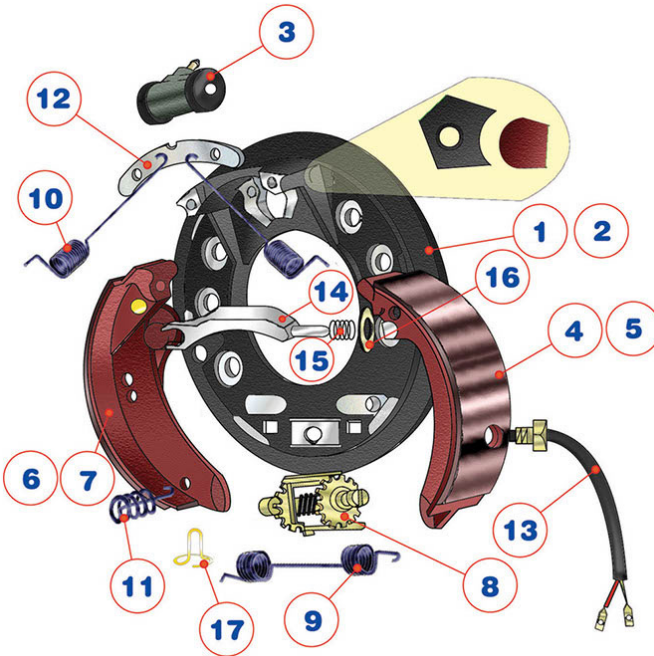 



BRAKES


BRAKE ASSY

KNOTT 245x60 Hub 115mm

Auto adjuster and parking brake

Cesab


Cod.	Pos.	Description	Qty
MF187		Brake assembly RH	
MF188		Brake assembly LH	
PTC21	1	Plate RH	
PTC22	2	Plate LH	
CF148	3	Wheel cylinder	
GNF113	4	Brake shoe neutral	
GNF112	5	Brake shoe right lever	
GNF112/A	6	Brake shoe left lever	
RGF112	7	Brake auto adjuster	
ML144	8	Brake spring	
ML147	9	Brake spring	
ML173	10	Brake spring	
ML134	11	Spring link	
ML376	12	Spring link	

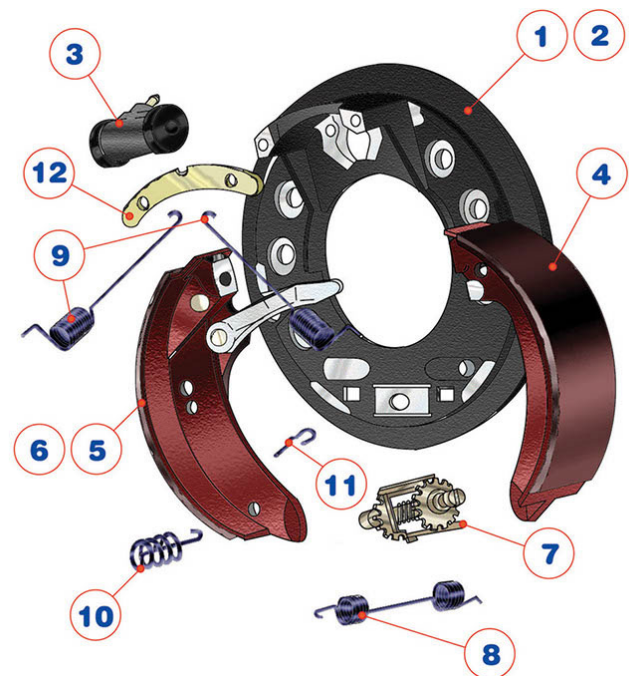 

KNOTT 250x40 Hub 105mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF803		Brake assembly RH	
MF804		Brake assembly LH	
PTC50	1	Plate RH	
PTC51	2	Plate LH	
CF192	3	Wheel cylinder	
GNF63	4	Brake shoe neutral	
GNF62	5	Brake shoe Right lever	
GNF62/A	6	Brake shoe Left lever	
RGF112	7	Brake auto adjuster	
ML314	8	Spring	
ML315	9	Spring	
ML171	10	Brake spring	
ML316	12	Spring link	

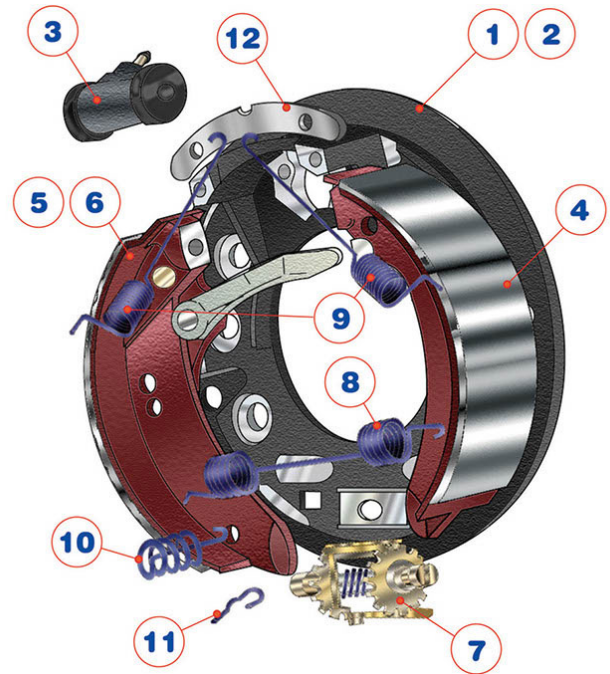 




BRAKES

BRAKE ASSY

KNOTT 250x45 Hub110mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF174		Brake assembly RH	
MF175		Brake assembly LH	
PTC4	1	Plate RH	
PTC5	2	Plate LH	
CF502	3	Wheel cylinder	
GNF21	4	brake shoe neutral	
GNF20	5	brake shoe right lever	
GNF20/A	6	brake shoe left lever	
RGF112	7	Brake auto adjuster	
ML149	8	Brake spring	
ML147	9	Brake spring	
ML163	10	Brake spring	
ML134	11	Spring link	
ML376	12	Spring link	

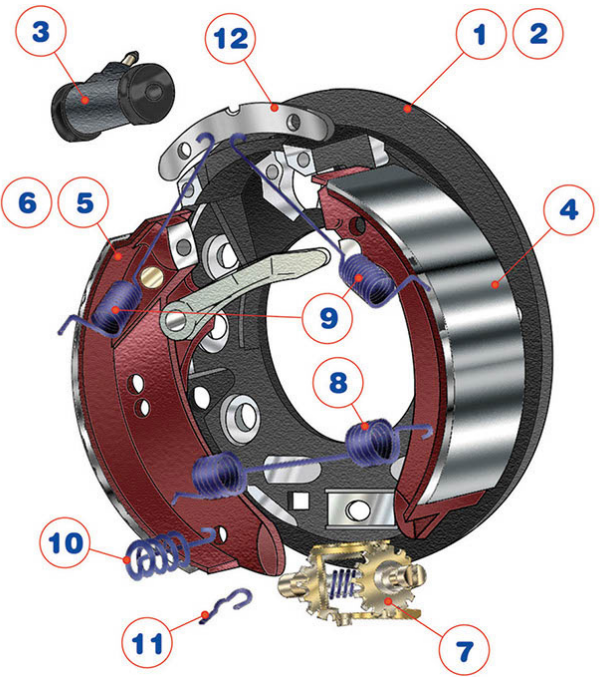 

KNOTT 250x55 Hub 115mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF503		Brake assembly RH	
MF504		Brake assembly LH	
PTC10	1	Plate RH	
PTC25	1	Plate RH	
PTC11	2	Plate LH	
CF115	3	Wheel cylinder	
GNF31	4	Brake shoe Neutral	
GNF30	5	Brake shoe Right lever	
GNF30/A	6	Brake shoe left lever	
RGF112	7	Brake auto adjuster	
ML149	8	Brake spring	
ML147	9	Brake spring	
ML162	10	Brake spring	
ML134	11	Spring link	
ML291	12	Spring link	

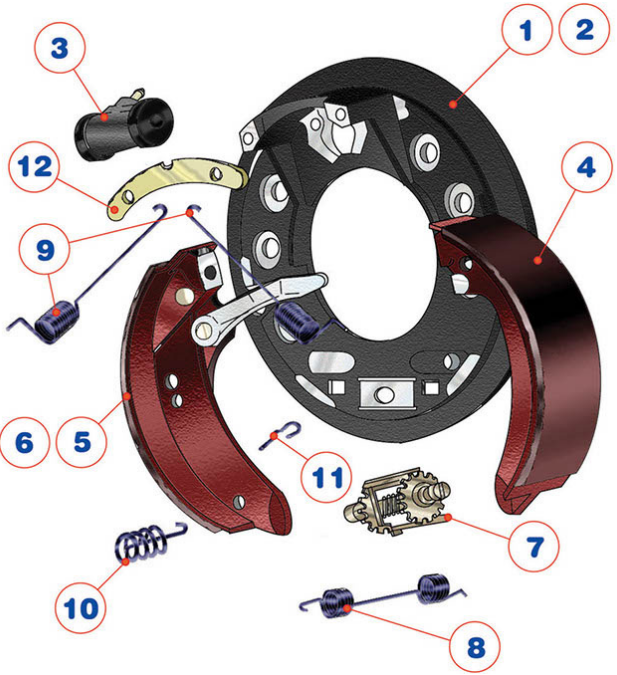 




BRAKES

BRAKE ASSY

KNOTT 270x60 Hub 130mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF229		Brake assembly RH	
MF230		Brake assembly LH	
PTC23	1	Plate RH	
PTC24	2	Plate LH	
CF503	3	Wheel cylinder	
GNF51	4	Brake shoe Neutral	
GNF50	5	Brake shoe Right lever	
GNF50/A	6	Brake shoe Left lever	
RGF111	7	Brake auto adjuster	
ML139	8	Brake spring	
ML133	9	Brake spring	
ML153	10	Brake spring	

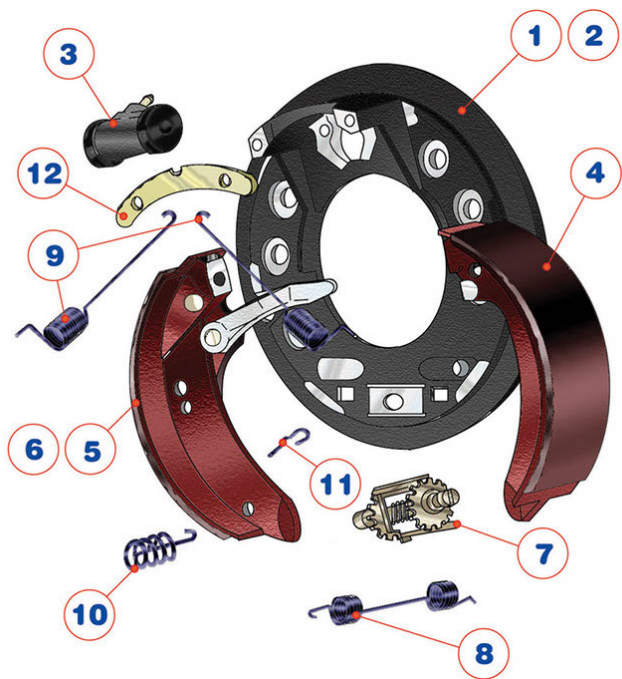 

KNOTT 270x60 Hub 140mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF231		Brake assembly RH	
MF232		Brake assembly LH	
PTC6	1	Plate RH	
PTC7	2	Plate LH	
CF503	3	Wheel cylinder	
GNF51	4	Brake shoe Neutral	
GNF50	5	Brake shoe Right lever	
GNF50/A	6	Brake shoe Left lever	
RGF111	7	Brake auto adjuster	
ML139	8	Brake spring	
ML133	9	Brake spring	
ML153	10	Brake spring	

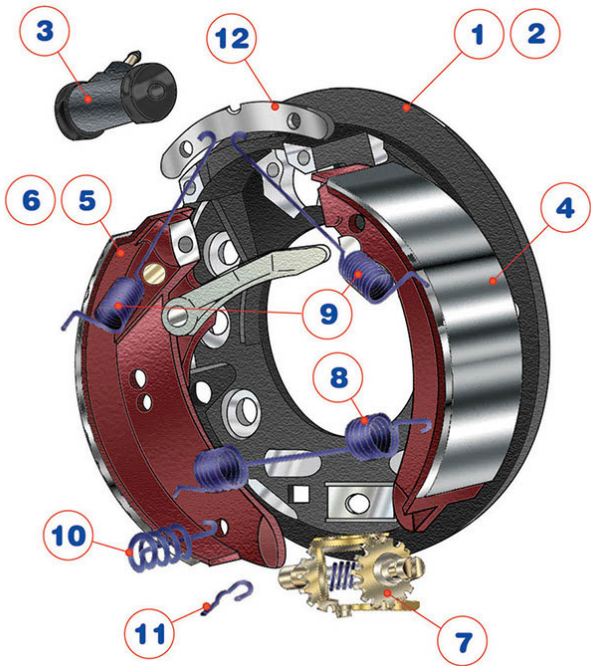 




BRAKES

BRAKE ASSY

KNOTT 270x64 Hub 138mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF371		Brake assembly RH	
MF372		Brake assembly LH	
PTC26	2	Plate LH	
CF502B	3	Wheel cylinder	
GNF115	4	Brake shoe Neutral	
GNF114	5	Brake shoe Right lever	
GNF114/A	6	Brake shoe Left lever	
RGF111	7	Brake auto adjuster	
ML148	8	Brake spring	
ML145	9	Brake spring	
ML146	10	Brake spring	
TA61529	12	Hooking plate	

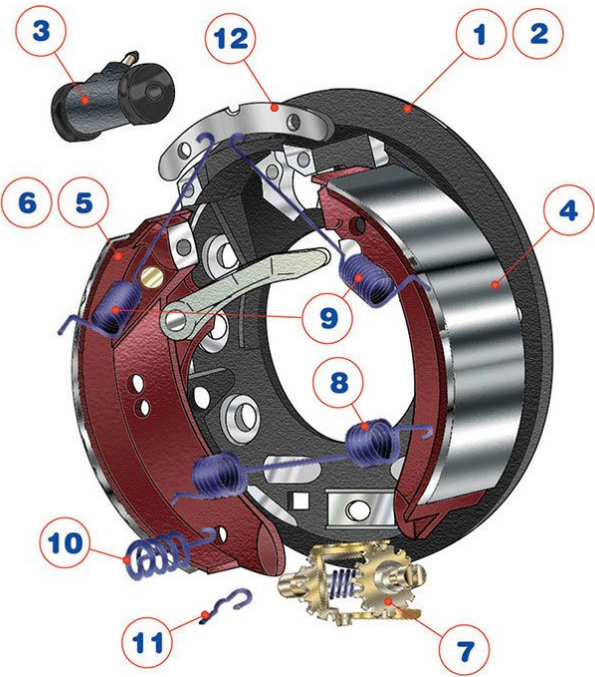 


KNOTT 300x60 Hub 130mm

Hand adjuster and parking brake

Cesab

Cod.	Pos.	Description	Qty
MF185		Brake assembly RH	
MF186		Brake assembly LH	
PTC46	1	Plate RH	
PTC47	2	Plate LH	
CF503	3	Wheel cylinder	
GNF118	4	Brake shoe neutral	
GNF119	5	Brake shoe Right lever	
GNF119/A	6	Brake shoe Left lever	
RGF126	7	Brake manual adjuster	
ML370	8	Spring	
ML133	9	Brake spring	
ML371	10	Spring	

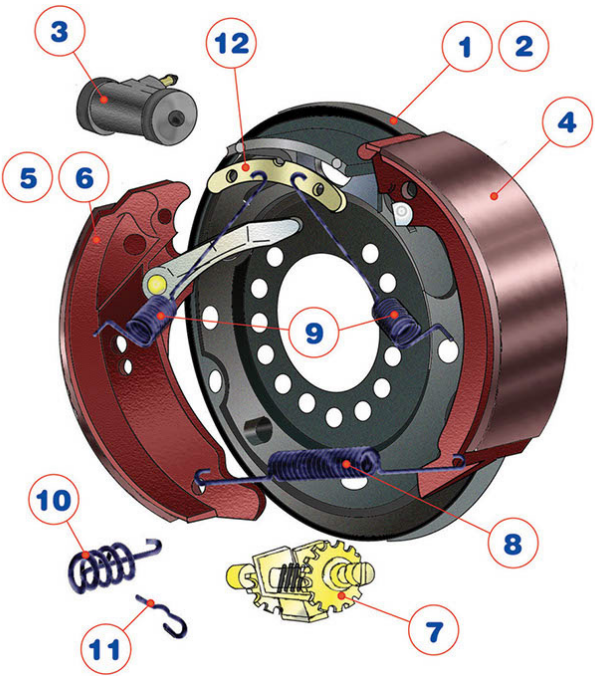 




BRAKES

BRAKE ASSY

KNOTT 315x80 Hub 150mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF191		Brake assembly RH	
MF192		Brake assembly LH	
PTC42	1	Plate RH	
PTC43	2	Plate LH	
CF141.2	3	Wheel cylinder	
GNF84	4	Brake shoe neutral	
GNF80	5	Brake shoe Right lever	
GNF81	6	Brake shoe Left lever	
RGF110	7	Brake auto adjuster	
ML142	8	Brake spring	
ML137	9	Brake spring	
ML155	10	Brake spring	
ML521	11	Spring link	

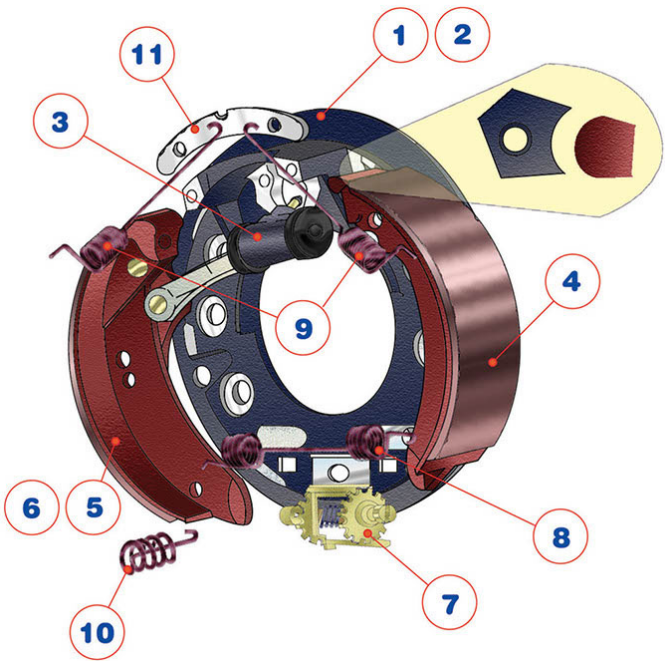 

KNOTT 315x80 Hub 155mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF312		Brake assembly RH	
MF311		Brake assembly LH	
PTC8	1	Plate RH	
PTC9	2	Plate LH	
CF503	3	Wheel cylinder	
GNF91	4	Brake shoe Neutral	
GNF90	5	Brake shoe Right lever	
GNF90/A	6	Brake shoe Left lever	
RGF110	7	Brake auto adjuster	
ML142	8	Brake spring	
ML137	9	Brake spring	
ML155	10	Brake spring	
ML521	12	Spring link	

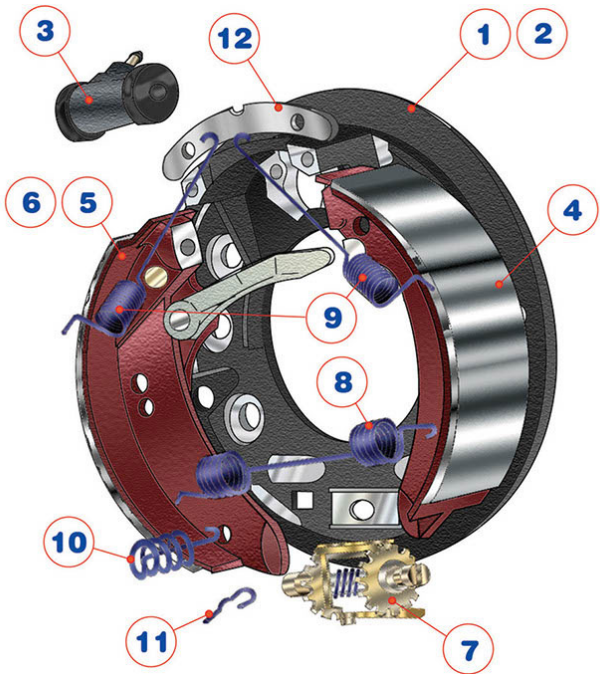 




BRAKES

BRAKE ASSY

KNOTT 315x80 Hub 155mm

Auto adjuster and parking brake


Cod.	Pos.	Description	Qty
MF315		Brake assembly RH	
MF316		Brake assembly LH	
PTC52	1	Plate RH	
PTC53	2	Plate LH	
CF141.1	3	Wheel cylinder	
GNF84	4	Brake shoe neutral	
GNF80	5	Brake shoe Right lever	
GNF81	6	Brake shoe Left lever	
RGF110	7	Brake auto adjuster	
ML142	8	Brake spring	
ML137	9	Brake spring	
ML155	10	Brake spring	
ML521	11	Spring link	
ML554	13	Spring	

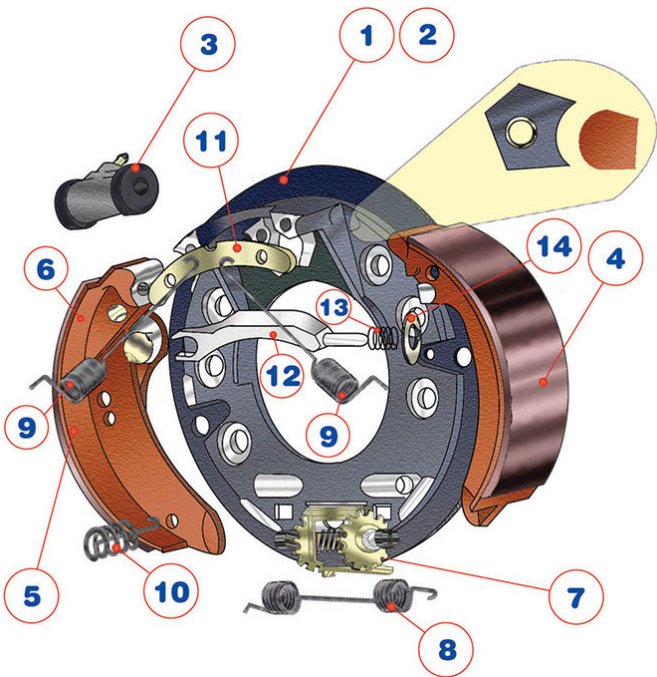 

KNOTT 315x80 Hub 150mm 16 holes

Auto adjuster, wear brake alarm and parking brake

Cod.	Pos.	Description	Qty
MF313		Brake assembly RH	
MF314		Brake assembly LH	
PTC42	1	Plate RH	
PTC43	2	Plate LH	
CF141.1	3	Wheel cylinder	
GNF82	4	Brake shoe neutral with alert cable right	
GNF83	5	Brake shoe neutral with alert cable left	
GNF80	6	Brake shoe Right lever	
GNF81	7	Brake shoe Left lever	
RGF110	8	Brake auto adjuster	
ML142	9	Brake spring	
ML137	10	Brake spring	
ML155	11	Brake spring	
ML521	12	Spring link	

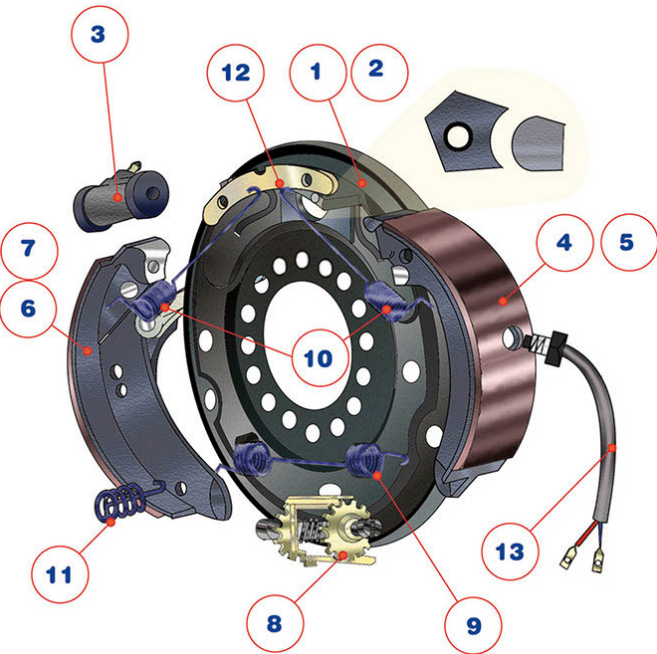 




BRAKES

BRAKE ASSY

KNOTT 325x80 Hub 155mm

Auto adjuster and parking brake

Cod.	Pos.	Description	Qty
MF195		Brake assembly RH	
MF196		Brake assembly LH	
PTC16	1	Plate RH	
PTC17	2	Plate LH	
CF505	3	Wheel cylinder	
GNF41	4	Brake shoe Neutral	
GNF40	5	Brake shoe Right lever	
GNF40/A	6	Brake shoe Left lever	
RGF110	7	Brake auto adjuster	
ML142	8	Brake spring	
ML137	9	Brake spring	
ML155	10	Brake spring	
ML521	12	Spring link	

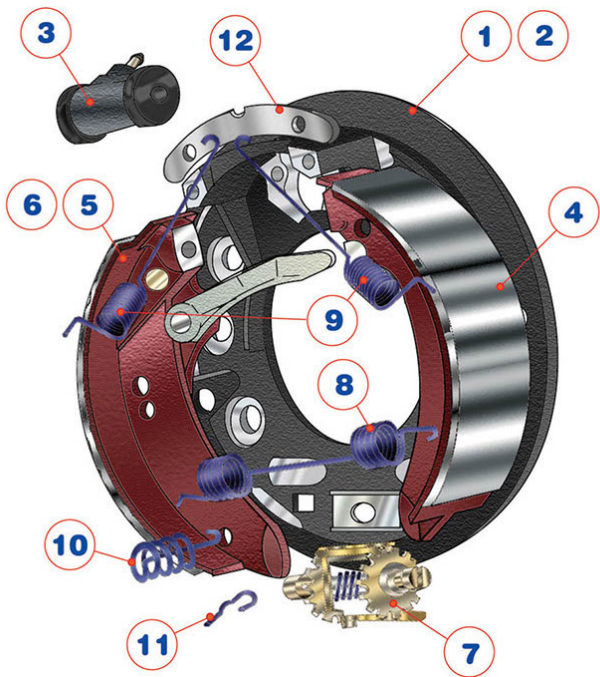 


KNOTT 400x80 Hub 140mm

Hand adjuster and parking brake

Caterpillar

Cod.	Pos.	Description	Qty
MF193		Brake assembly RH	
MF194		Brake assembly LH	
PTC54	1	Plate RH	
PTC55	2	Plate LH	
CF161	3	Wheel cylinder	
GNF28	4	Brake shoe Neutral	
GNF29	5	Brake shoe Right lever	
GNF29/A	6	Brake shoe Left lever	
RGF114	7	Brake manual adjuster	
ML378	8	Spring	
ML143	9	Brake spring	
ML154	10	Brake spring	

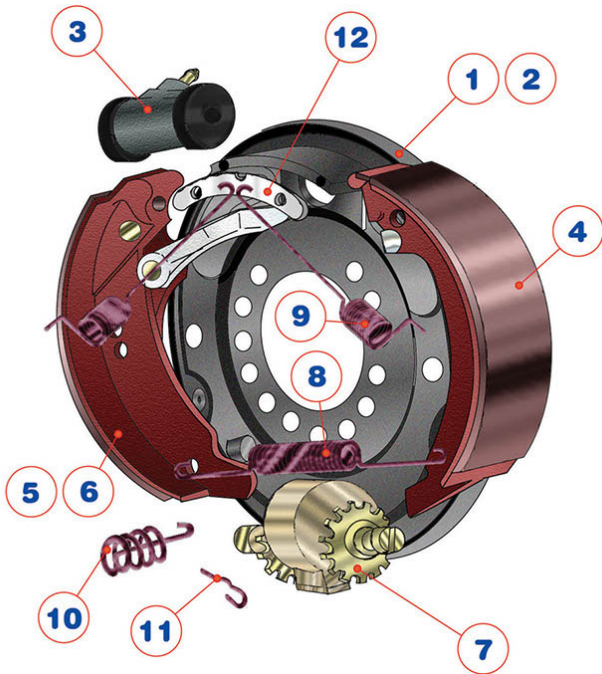 




BRAKES

BRAKE ASSY

KNOTT 400x80

Hand adjuster and parking brake

Cod.	Pos.	Description	Qty
MF404		Brake assembly RH	
MF405		Brake assembly LH	
PTC131	1	Plate RH	
PTC132	2	Plate LH	
CF161	3	Wheel cylinder	
GNF154	4	Brake shoe Neutral	
GNF153	5	Brake shoe Right lever	
GNF153/A	6	Brake shoe Left lever	
RGF114	7	Brake manual adjuster	
ML378	8	Spring	
ML143	9	Brake spring	
ML154	10	Brake spring	

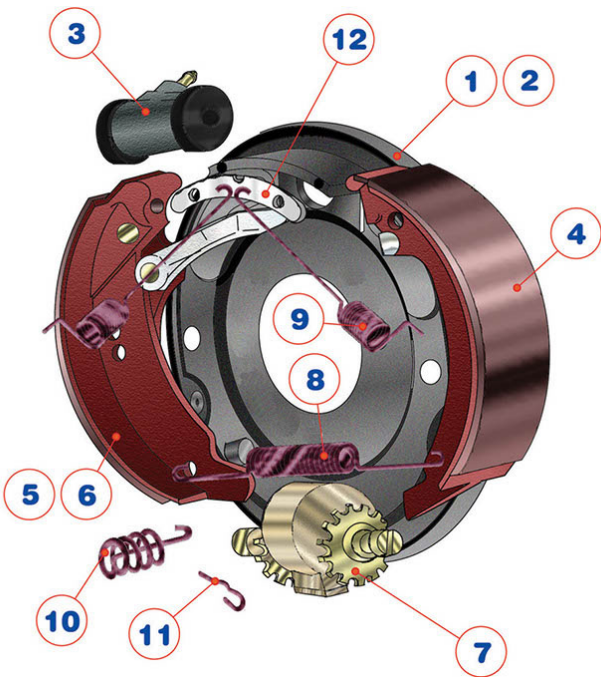 

KNOTT 420x90

Cesab

Cod.	Pos.	Description	Qty
MF389		Brake assembly RH	
MF390		Brake assembly LH	
PTC114	1	Internal Plate	
PTC115	2	Mudguard plate RH	
PTC116	3	Mudguard plate LH	
CF014B	4	Wheel cylinder	
CF014BM	4	Wheel cylinder Mineral oil	
GNF129	5	Brake shoe	
ML459	6	Spring	
ML178	7	Spring	

